# INSTALLATION, USE & CARE MANUAL

# FREESTANDING GAS RANGES

| | |
|---|---|
| **Models X365GGVX (X36 5 00 X)** | [M3W0GTU4X(2 or 5)A] |
| **Models X365GGVBI** | [M3W0GTU4W(2 or 5)A] |
| **Models X365GGVCR** | [M3W0GTU4D(2 or 5)A] |
| **Models X365GGVGI** | [M3W0GTU4I(2 or 5)A] |
| **Models X365GGVRO** | [M3W0GTU4R(2 or 5)A] |
| **Models X365GGVVI** | [M3W0GTU4L(2 or 5)A] |
| **Models X365GGVVE** | [M3W0GTU4V(2 or 5)A] |
| **Models X365GGVBL** | [M3W0GTU4U(2 or 5)A] |
| **Models X365GGVNE** | [M3W0GTU4N(2 or 5)A] |
| | |
| **Models X366GGVX (X36 6 00 X)** | [M3Y0GTU4X(2 or 5)A] |
| **Models X366GGVBI** | [M3Y0GTU4W(2 or 5)A] |
| **Models X366GGVCR** | [M3Y0GTU4D(2 or 5)A] |
| **Models X366GGVGI** | [M3Y0GTU4I(2 or 5)A] |
| **Models X366GGVRO** | [M3Y0GTU4R(2 or 5)A] |
| **Models X366GGVVI** | [M3Y0GTU4L(2 or 5)A] |
| **Models X366GGVVE** | [M3Y0GTU4V(2 or 5)A] |
| **Models X366GGVBL** | [M3Y0GTU4U(2 or 5)A] |
| **Models X366GGVNE** | [M3Y0GTU4N(2 or 5)A] |

310349

BERTAZZONI SpA
Via Palazzina 8
42016 Guastalla RE
ITALY

**WWW.BERTAZZONI-ITALIA.COM**

## From the desk of the President

Dear new owner of a Bertazzoni product,

I want to thank you for choosing one of our beautiful PRO ranges. We know that you have many brands and products to choose from and we are thrilled that you have decided to take onw of your products into your home.

We take as much pride in making our ranges as we hope you will in owning them. My family started manufacturing cooking appliances in 1882. Each of our products is a blend of Italian design finess and superior appliance technology. While we can not replace your unique talent at cooking delicious recipes for yourself, your family and your friends, we try our best to make cooking easier, more effective and more fun.

Our appliances are designed according to the strictest safety and performance standard for the European and the North American market. We follow the most advanced manufacturing philosophy. Each appliance leaves the factory after thorough quality inspection and testing. Our distributors and our service partners are ready to answer any questions you may have regarding how to install, use and care for your Bertazzoni product.

This manual will help you learn to use the product in the safest and most effective manner and care for it so that it may give you the highest satisfaction for years to come.

The manual also includes directions for the professional installer that will install the product in your home. We recommend using factory-trained professionals for the delicate task of installing and testing appliances in your home. Please call Customer Service at (800) if you need help locating a factory-trained professional installer in your area.

Please keep this manual for future use.

Grazie!

## TABLE OF CONTENTS


**WARRANTY AND SERVICE** ..... **4**

**IMPORTANT SAFETY INFORMATION** ..... **5**

**PRODUCT SPECIFICATIONS** ..... **6**

## INSTALLATION

**BEFORE INSTALLATION** ..... **7**

**INSTALLING THE LEGS** ..... **8**

**INSTALLING THE WORKTOP FRONTGUARD (OPTIONAL)** ..... **8**

**INSTALLING THE BACKGUARD** ..... **9**

**INSTALLING THE ANTI-TIP STABILLTY DEVICE** ..... **10**

**INSTALLATION REQUIREMENTS** ..... **10**

**INSTALLATION ADJACENT TO KITCHEN CABINETS** ..... **11**

**EXHAUST HOOD INSTALLATION** ..... **11**

**ELECTRICAL CONNECTION** ..... **12**

WIRING DIAGRAM ..... 12

**GAS CONNECTION** ..... **13**

**GAS CONVERSION** ..... **15**

STEP 1: PRESSURE REGULATOR ..... 15
STEP 2: SURFACE BURNERS ..... 16
STEP 3: MAIN OVEN BURNER ..... 16
STEP 4: BROILER BURNER ..... 17
STEP 5: VISUAL CHECKS ..... 18
STEP 6: MINIMUM FLAME ADJUSTMENT ..... 19

**INSTALLATION CHECKLLST** ..... **21**

**FINAL PREPARATION** ..... **21**

## USER MANUAL

**ROOM VENTILATION** ..... **22**

**SURFACE BURNER LAYOUT** ..... **22**

**SURFACE COOKING** ..... **23**

CONTROL PANEL SYMBOLS ..... 23
SURFACE BURNER OPERATION ..... 23
TIPS FOR USING BURNERS CORRECTLY ..... 24
TIPS FOR USING PANS CORRECTLY ..... 24

**OVEN COOKING** ..... **25**

CONTROL PANEL SYMBOLS ..... 25
OVEN SHELVES ..... 25
GAS OVEN OPERATION ..... 26
CONVECTION COOKING ..... 27
COOKING WITH THE GAS BROILER ..... 27

**MAINTAINING YOUR RANGE** ..... **28**

**CLEANING YOUR RANGE** ..... **28**

**IMPORTANT APPLIANCE INFORMATION** ..... **29**

## WARRANTY AND SERVICE

All Bertazzoni products carry a 2 year parts and labor warranty.

Service on all Bertazzoni products shall be carried out by factory-trained professionals only.

For warranty service please contact Customer Service at the numbers indicated below.

**CUSTOMER SERVICE**

| | |
|---|---|
| English/spanish hotline | (866) 905-0010 |
| French | (800) 561-7625 |
| Fax | (714) 428-0040 |

Email

BERTAZZONIHELP@SERVICEPOWER.COM

Mailing address

SERVICEPOWER
1503 South Coast drive
Suite 320
Costa Mesa CA 92626

**REPLACEMENT PARTS**

Only Bertazzoni replacement parts may be used in performing service on the appliance.

Replacement parts are available from factory authorized parts distributors.

| | | |
|---|---|---|
| AP Wagner | PHONE 1 888 279 2463 | FAX 716 856 4779 |
| Reliable Parts | PHONE 206 575 8818 | FAX 206 575 0910 |
| Coast | PHONE 604 321 6644 | FAX 604 321 6646 |

## IMPORTANT SAFETY INFORMATION

**PLEASE READ AND FOLLOW THESE IMPORTANT INSTRUCTIONS FOR THE SAFETY OF YOUR HOME AND OF THE PEOPLE LIVING IN IT.**

Save this Manual for local electrical inspector's use.

Read and save these instructions for future reference.

Observe all governing codes, ordinances and regulations.

**WARNING!**

**If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.**

Do not store or use gasoline or other flammable substances in the vicinity of this or any other appliance.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.

In Massachusetts: All gas products must be installed by a "Massachusetts" licensed plumber or gasfitter. A "T" handle type manual gas valve must be installed in the gas line connected to this appliance.

**WHAT TO DO IF YOU SMELL GAS**

- **Do not light any appliance.**
- **Do not touch any electrical switch.**
- **Do not use any phone in your building.**
- **Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.**
- **If you cannot reach your gas suppliers, call the fire department.**

**WARNING**

NEVER use this appliance as a space heater to heat or warm the room. Doing so may resul in carbon monoxide poisoning and overheating of the oven

## Warning!

**This range can tip. Injury to persons could result. Install anti-tip device shipped with range. See Installation Instructions.**

**WARNING!**

**Read this instruction booklet before installing and using the appliance.**

**The manufacturer will not be responsible for any damage to property or to persons caused by incorrect installation or improper use of the appliance.**

The manufacturer reserves the right to make changes to its products when considered necessary and useful, without affecting the essential safety and operating characteristics.

**This appliance has been designed for non-professional, domestic use only.**

**Do not use this appliance to heat a room.**

**Do not place any pot or pan on the open oven door. The door is made of glass and it can break if loaded with a weight.**

Before beginning installation, please read these instructions completely and carefully.

Do not remove permanently affixed labels, warnings, or plates from the product. This may void the warranty. -Please observe all local and national codes and ordinances.

Please ensure the range is properly grounded.

The installer should leave these instructions with the consumer who should retain for local inspector's use and for future reference.

The plug should always be accessible.

Installation must conform with local codes or in the absence of codes, the National Fuel Gas Code NSIZ223.1-latest edition. Electrical installation must be in accordance with the National Electrical Code, ANIS/NFPA70 - latest edition and/or local codes. IN CANADA: Installation must be in accordance with the current CAN/CGA-B149.1 National Gas Installation Code or CAN/CGA-B 149.2, Propane Installation Code and/or local codes. Electrical installation must be in accordance with the current CSA C22.1 Canadian Electrical Codes Part 1 and/or local codes.

Installation of any gas-fired equipment should be made by a licensed plumber. A manual gas shut-off valve must be installed in the gas supply line ahead of the oven in the gas flow for safety and ease of service.

## PRODUCT SPECIFICATIONS

Dimensions (insert drawings front, side and back

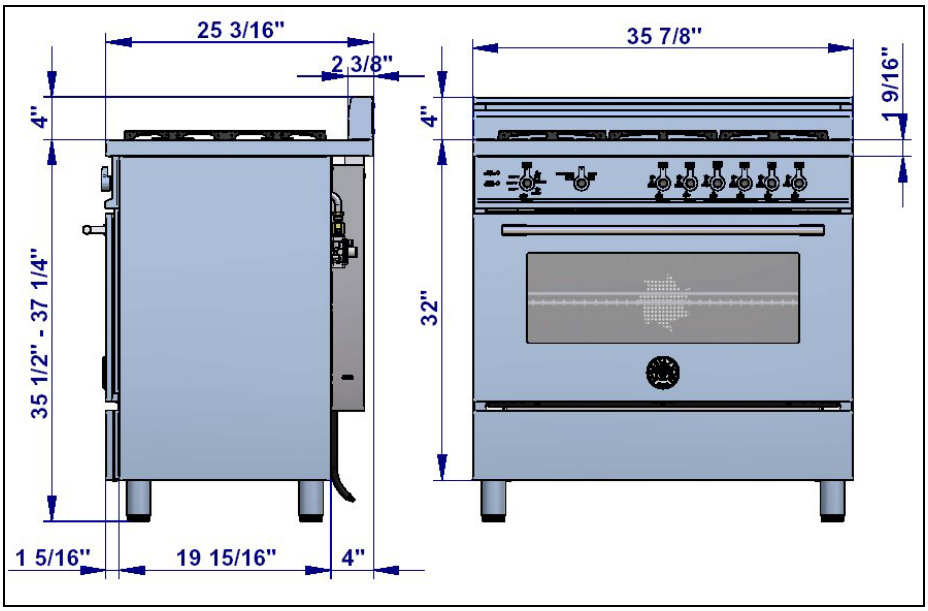


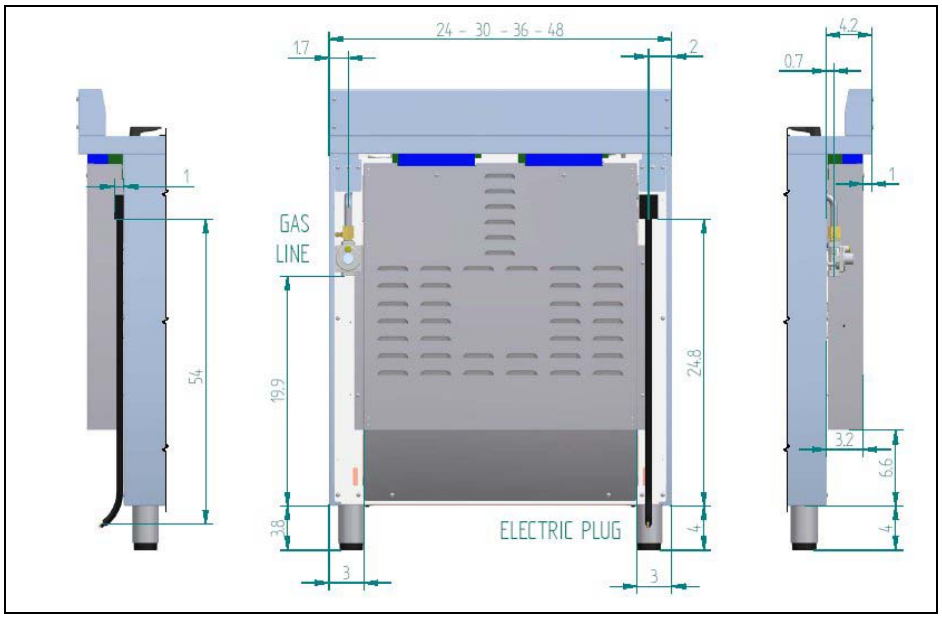


Weight

Burner power

| | |
|---|---|
| **Auxiliary** | **3400 BTU/h** |
| **Semi-rapid** | **6100 BTU/h** |
| **Rapid** | **10400 BTU/h** |
| **Dual burner (inner)** | **2800 BTU/h** |
| **Dual burner ( outer)** | **12000 BTU/h** |
| **Oven** | **16000 BTU/h** |
| **broiler** | **14500 BTU/h** |

## BEFORE INSTALLATION

This appliance shall only be installed by an authorized professional.

This appliance shall be installed in accordance with the manufacturer's installation instructions.

This appliance must be installed in accordance with the norms & standards of the country where it will be installed. The installation of this appliance must conform to local codes and ordinances. In the absence of local codes, Installations must conforms to American National Standards, *National Fuel Gas Code ANSI Z223.1 – latest edition** or B149.1.*

The appliance, when installed, must be electrically grounded in accordance with local codes or, in the absence of local codes, with the *National Electrical Code, ANSI/NFPA 70.*

If local codes permit, a flexible metal appliance connection with the new AGA or CGA certified design, max. 5 feet (1,5 m) long, ½" I.D. is recommended for connecting this appliance to the gas supply line. Do not bend or damage the flexible connector when moving the appliance.

This appliance must be used with the pressure regulator provided. The regulator shall be properly installed in order to be accessible when the appliance is installed in its final location. The pressure regulator must be set for the type of gas to be used. The pressure regulator has ½" female pipe thread. The appropriate fitting must be determined based on the size of your gas supply line, the flexible metal connector and the shutoff valve.

The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than ½ psi (3.5 kPa).

All opening and holes in the wall and floor, back and under the appliance shall be sealed before installation of the appliance.

A manual valve shall be installed in an accessible location in the gas line external to the appliance for the purpose of turning on or shutting off gas to the appliance

**WARNING!**

**Do not use aerosol sprays in the vicinity of this appliance while it is in operation**

ROOM VENTILATION: An exhaust fan may be used with the appliance; in each case it shall be installed in conformity with the appropriate national and local standards. Exhaust hood operation may affect other vented appliances; in each case it shall be installed in conformity with the appropriate national and local standards.

### TYPE OF GAS

This appliance is shipped from the factory for use with natural gas. For use with propane lp gas please follow the conversion procedure described on pg. 17. A step by step conversion procedure is also included with each set of lp gas nozzles.

### GAS PRESSURE

The maximum inlet gas supply pressure incoming to the gas appliance pressure regulator is 20'' water column (5 kPa) .

The minimum gas supply pressure for checking the regulator setting shall be at least 1" w.c. (249 Pa) above the inlet specified manifold pressure to the appliance (this operating pressure is 4" w.c. (1.00 kPa) for Natural Gas and 11" w.c. (2.75 kPa for LP Gas).

## INSTALLING THE LEGS

Bertazzoni ranges must be used only with the legs properly installed.

Four height-adjustable legs are shipped with the range in the polysterene container situated over the appliance.

Before installing the legs, position the appliance near its final location as the legs are not suitable for moving the appliance over long distances.

After unpacking the range, raise it enough to insert the legs in the appropriate receptacles situated on the lower part of the appliance. Lower the range gently to keep any undue strain from legs and mounting hardware. If possible use a pallet or lift jack instead of tilting the unit.

Adjust leg height to the desired level by twisting the inside portion of the leg assembly until the proper height is reached. Check with a level that the cooktop is perfectly level.

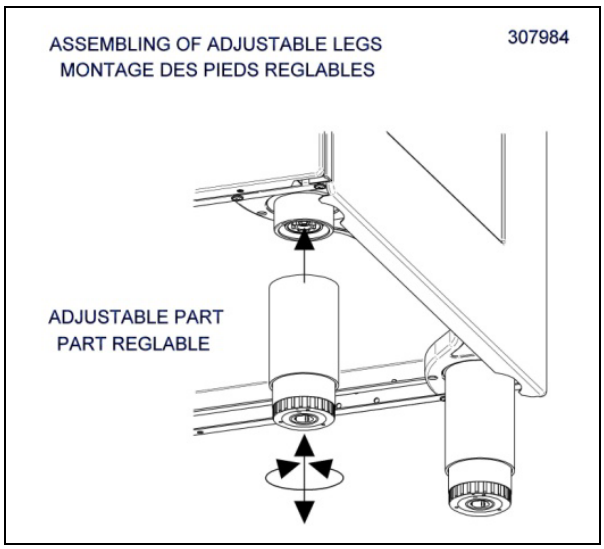


## INSTALLING THE WORKTOP FRONTGUARD

To increase the clearance between the front edge of the worktop and the burners it is possible to install the worktop frontguard shipped with the appliance.

To install the front guard, hold it with the pointed edges looking up. Align the edges of the frontguard with the appropriate receptacles in the bottom of the worktop and press firmly until the frontguard is securely attached to the worktop.

ATTENTION: once installed the frontguard may only be removed by disassembling the worktop. Attempting to remove the frontguard without disassembling the worktop will result in permanent damage to the worktop.

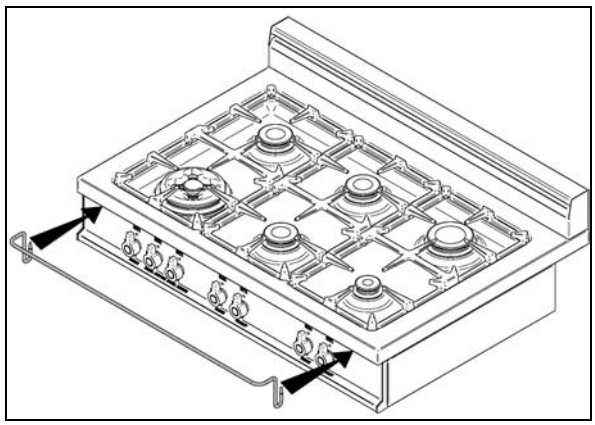

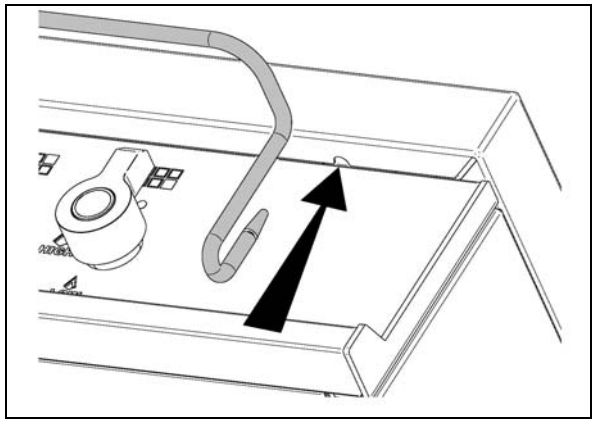

## INSTALLING THE BACKGUARD

The backguard must be installed prior to operation of the appliance for appropriate ventilation of the oven compartment.

The supplied backguard is a 2-part assembly. The box also contains a set of metal screws for securing the backguard to the worktop.

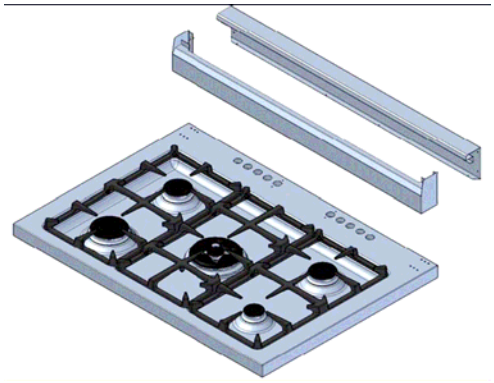

Disassemble the backguard and position the front part on the worktop. Align the screw holes with the corresponding holes at the back of the worktop.

If the holes are not aligned, partially loosen the brackets att the back of the worktop as shown below.

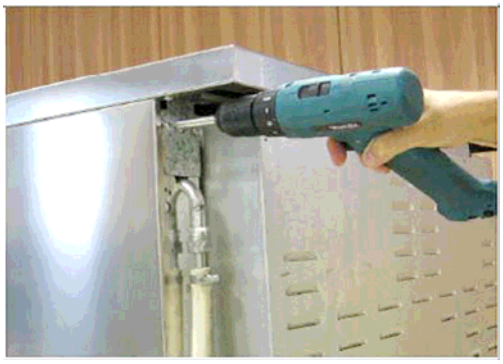

Install the front part of the backguard by tightening the 2 central screws from the top and 2 lateral screws from the bottom.

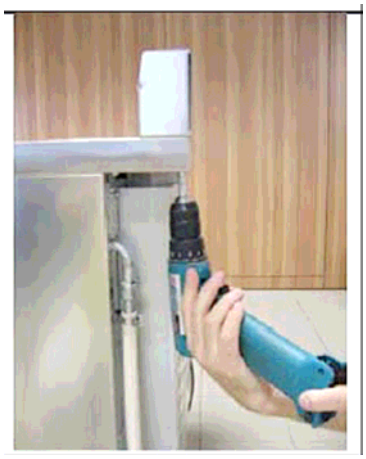

Position the back part of the backguard and secure it to the worktop tightening 4 screws from the bottom.

Connect the back and front part of the upstand. Check for tight assembly.

## INSTALLING THE ANTI-TIP STABILİTY DEVICE

The anti-tip bracket shipped with the range must be properly secured to the rear wall as shown in the pircture below.

The height of the bracket from the floor must be determined after the range legs have been adjusted to the desired height and after the range has been leveled.

Measure the distance from the floor to the bottom of the anti-tip bracket receptacle on the back of the appliance.

Position the two anti-tip brackets on the wall at the desired height plus 1/8" (0.32 cm). The brackets must be placed at 2”5/16 (6,0 cm) from the side of the range. The distance between the two bracket is 31”1/4 (79.3 cm).

Secure the brackets to the wall with appropriate hardware.

Slide the range against the wall until the brackets are fully inserted into their receptacles on the back of the range.

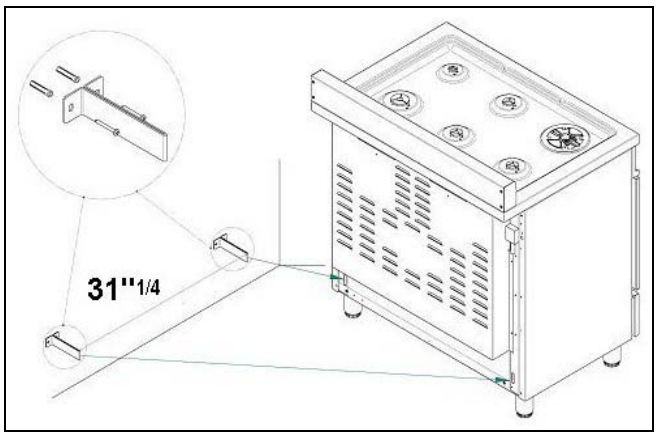


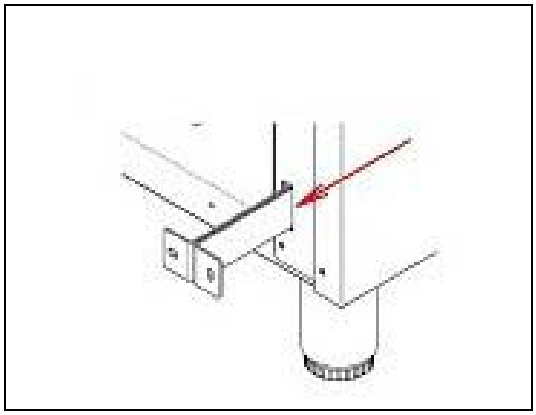

## INSTALLATION **REQUIREMENTS**

### ELECTRICAL

A properly-grounded horizontally- mounted electrical receptacle should be installed no higher than 3" (7.6 cm) above the floor, no less than 2” (5 cm) and no more than 8” (20,3 cm) from the right side (facing product).

Check all local code requirements.

### GAS

An agency-approved, properly-sized manual shut-off valve should be installed no higher than 3" (7.6 cm) above the floor and no less than 2” (5 cm) and no more than 8” (20.3 cm) from the left side (facing product).

To connect gas between shut-off valve and regulator, use agency-approved, properly sized flexible or rigid pipe. Check all local code requirements.

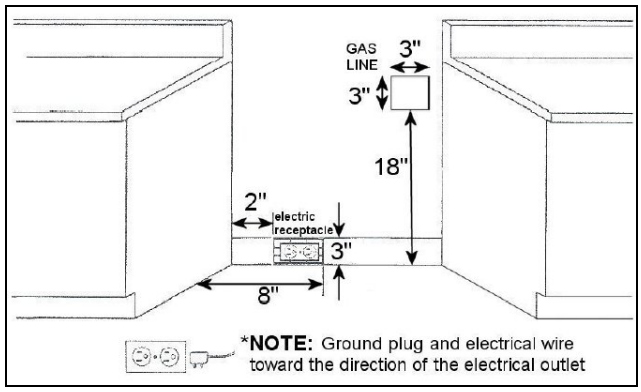

## INSTALLATION ADJACENT TO KITCHEN CABINETS

This range may be installed directly adjacent to existing countertop high cabinets (36" or 91.5 cm from the floor).

For the best look, the worktop should be level with the cabinet countertop. This can be accomplished by raising the unit using the adjustment spindles on the legs.

ATTENTION: the range CANNOT be installed directly adjacent to kitchen walls, tall cabinets, tall appliances, or other vertical surfaces above 36" (91.4 cm) high. The minimum side clearance in such cases is 6" (15.2 cm).

Wall cabinets with minimum side clearance must be installed 18" (45.7 cm) above the countertop with countertop height between 35 ½" (90.2 cm) and 37 ¼" (94.6 cm). The maximum depth of wall cabinets above the range shall be 13" (33.0 cm)

| | |
|---|---|
| A | 36" (91,5 cm) |
| B | 36" (91,5 cm) |
| C | 13" (33,0 cm) |
| D | 18" (45,7 cm) |
| E | 35"1/2(90,2 cm) / 37" ¼ (94,6 cm) |
| F | 6" (15,2 cm) |

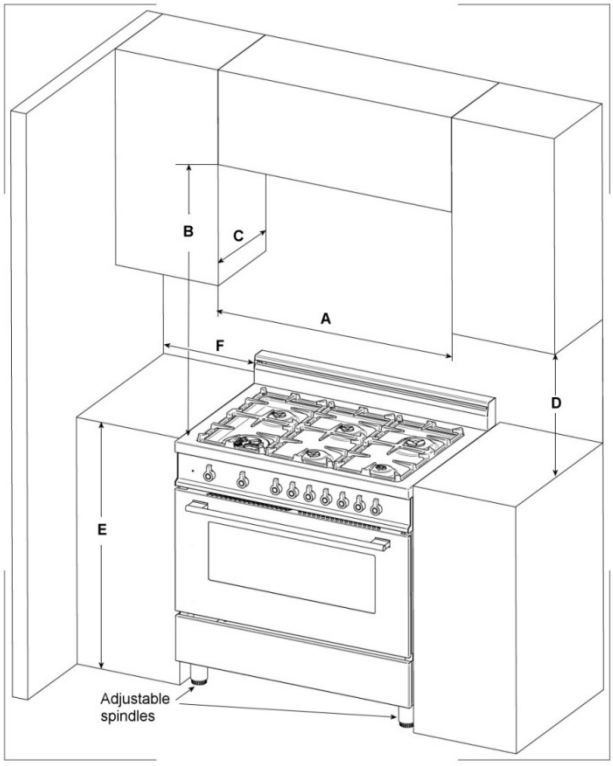


## EXHAUST HOOD INSTALLATION

This range will best perform when used with PRO line Bertazzoni exhaust hoods. These hoods have been designed to work in conjunction with the Bertazzoni range and have the same finish for a perfect look.

For maximum performance, the height of the bottom of the hood from the worktop should be between 25 1/2" (65 cm) and 31 1/2" (80 cm). This would typically result in the bottom of the hood being 61 1/2" (156.2 cm) to 67 1/2" (171.5 cm) above the floor. These measurements provide for safe and efficient operation of the hood.

Before installation of the exhaust hood, consult local or regional building and installation codes for additional specific clearance requirements.

Refer to the range hood installation instructions provided by the manufacturer for additional information.

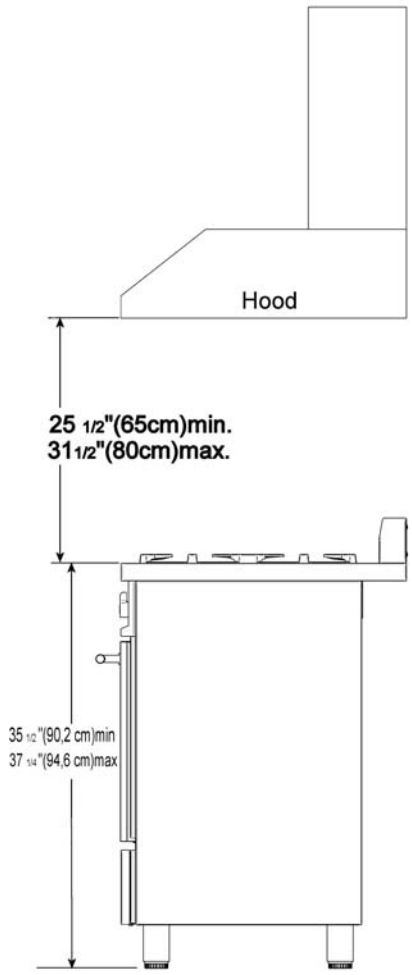

## ELECTRICAL CONNECTION

This unit is manufactured for a polarized, grounded 120 volt/60 Hz, 16 amp system.

Electric power consumption is about 150 W.

The minimum of 102 VAC is required for proper operation of gas ignition systems.

The circuit must be grounded and properly polarized.

The unit is equipped witth a SJT power cord. In case of replacement, the power cord shall be replaced with one of the same type, size and length.

### ELECTRICAL GROUNDING

This appliance is equipped with a three-prong plug for your protection against shock hazard and should be plugged directly into a properly grounded socket. Do not cut or remove the grounding prong from this plug.

**WARNING!**

**ELECTRICAL SHOCK HAZARD**

**Disconnect electrical power at the circuit breaker box or fuse box before installing the appliance.**

**Provide appropriate ground for the appliance.**

**Use copper conductors only.**

**Failure to follow these instructions could result in serious injury or death**

**CAUTION**

**Label all wires prior to disconnecting when servicing controls. Wiring errors can cause improper and dangerous operation.**

**Verify proper operation after servicing.**

### WIRING DIAGRAM

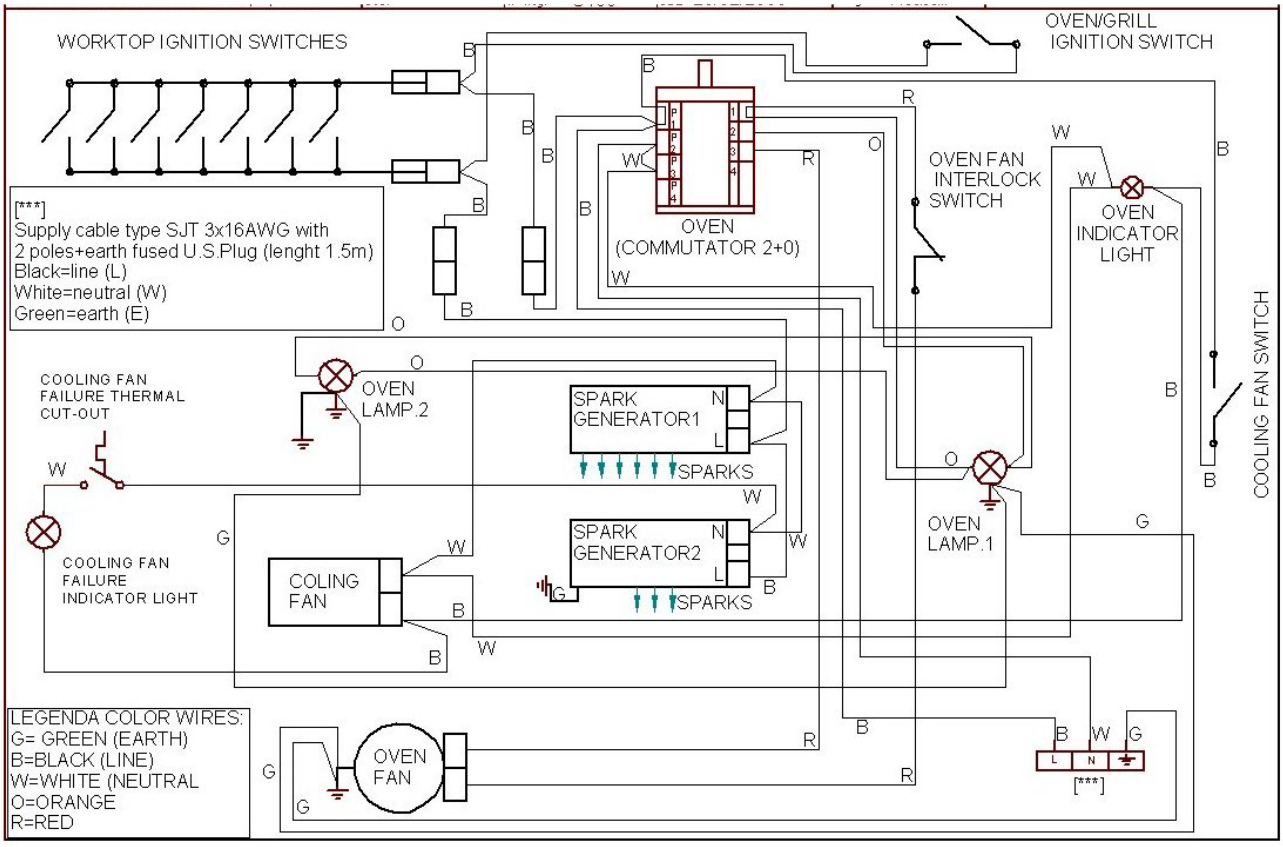

## GAS CONNECTION

All gas connections must comply with national and local codes. The gas supply line (service) must be the same size or greater than the inlet line of the appliance. This range uses a 1/2" NPT inlet (see drawing below for details of gas connection). On all pipe joints use appropriate sealant resistant to gas.

This range can be used with Natural or LP/Propane gas. The range is shipped from the factory for use with natural gas.

For LP/propane household installation, the appliance must be converted by the dealer, by a factory-trained professional or by a qualified licensed plumber or gas service company.

Gas conversion is important for safe and effective use of the appliance. It is the responsibility of the dealer and the owner of the range to perform the appropriate gas conversion following the directions of the manufacturer.

THE GAS CONVERSION PROCEDURE IS DESCRIBED IN THIS MANUAL AND IN THE PACKAGE CONTAINING THE CONVERSION NOZZLES SHIPPED WITH EVERY RANGE.

Please provide the service person with this manual before work is started on the range.

**WARNING!**

**DO NOT USE AN OPEN FLAME WHEN CHECKING FOR LEAKS!**

Leak testing of the appliance shall be conducted according to the manufacturer's instructions. Before placing the oven into operation, always check for leaks with soapy water solution or other acceptable method.

**MANUAL SHUT-OFF VALVE**

THIS VALVE IS NOT SHIPPED WITH THE APPLIANC AND MUST BE SUPPLIED BY THE INSTALLER.

The manual shut-off valve must be installed in the gas service line between the gas hook-up on the wall and the appliance inlet, in a position where it can be reached quickly in the event of an emergency.

**In Massachusetts:** A 'T' handle type manual gas valve must be installed in the gas supply line to this appliance.

**FLEXIBLE CONNECTIONS**

In case of installation with flexible couplings and/or quick-disconnect fittings, the installer must use a heavy-duty, AGA design-certified commercial flexible connector of at least 1/2" (1.3 cm) ID NPT (with suitable strain reliefs) in compliance with ANSI Z21.41 and Z21.69 standards.

**In Massachusetts:** The unit must be installed with a 36" (3-foot) long flexible gas connector.

**In Canada:** use CAN 1-6.10-88 metal connectors for gas appliances and CAN 1-6.9 M79 quick disconnect device for use with gas fuel.

**PRESSURE TEST-POINT STOPPER VALVE**

To avoid gas leaks, the pressure test-point stopper valve and gasket supplied with the range must be installed on the gas fitting at the back of the range according to the diagram below.

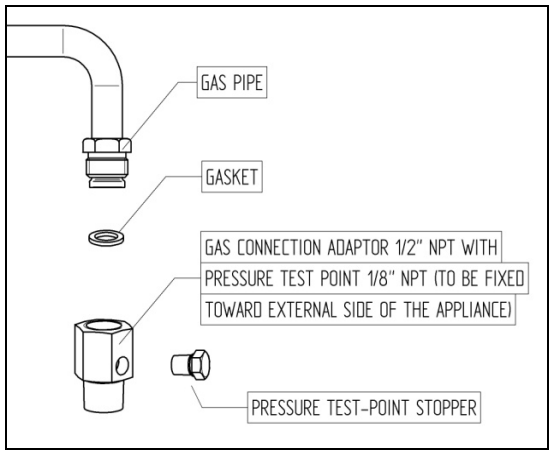
GAS PIPE
GASKET
GAS CONNECTION ADAPTOR 1/2" NPT WITH
PRESSURE TEST POINT 1/8" NPT (TO BE FIXED
TOWARD EXTERNAL SIDE OF THE APPLIANCE)
PRESSURE TEST-POINT STOPPER

**PRESSURE REGULATOR**

Since service pressure may fluctuate with local demand, every gas cooking appliance must be equipped with a pressure regulator on the incoming service line for safe and efficient operation.

The pressure regulator shipped with the appliance has has two female threads ½" NPT. The regulator shall be installed properly in order to be accessible when the appliance is installed in its final position.

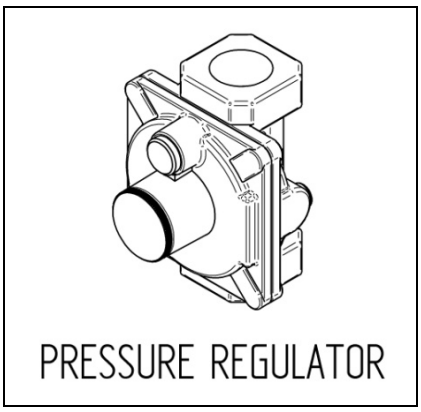


Manifold pressure should be checked with a manometer and comply with the values indicated below:

Natural gas → 4.0" W.c.P.

LP/Propane → 11.0" W.C.P.

Incoming line pressure upstream from the regulator must be 1" W.c.P. higher than the manifold pressure in order to check the regulator.

The regulator used on this range can withstand a maximum input pressure of 1/2 PSI (14.0" W.c.P.) If the line pressure exceeds that amount, a step-down regulator is required.

The appliance, its individual shut-off valve, and the pressure regulator must be disconnected from the gas line during any pressure testing of that system at pressures in excess of 1/2 psig (3.45 kPa).

The individuaL manual shut-off valve must be in the OFF position during any pressure testing of the gas supply piping system at test pressures equal to or less than ½ psig (3.45 kPa).

# GAS CONVERSION

**WARNING!**
**Before carrying out this operation, disconnect the appliance from gas and electricity.**

**Gas conversion shall be conducted by a factory-trained professional.**

**Call the customer service hotline to identify a factory-trained professional near your home.**

The gas conversion procedure for this range includes 6 steps:

1. Pressure regulator
2. Surface burners
3. Main oven burner
4. Broiler burner
5. Visual checks prior to closure of oven bottom panel
6. Adjustment of minimum setting

The conversion is not completed if all 6 steps have not been concluded properly.

Before performing the gas conversion, locate the package containing the replacement nozzle shipped with every range. **IMPORTANT**: Each nozzle has a number indicating its flow diameter printed on the body. Consult the table on page 20 for matching nozzles to burners.

Save the nozzles removed from the range for future use.

**STEP 1: PRESSURE REGULATOR**

The pressure regulator supplied with the appliance is a convertible type pressure regulator for use with Natural Gas at a nominal outlet pressure of 4" w.c. or LP gas at a nominal outlet pressure of 11" w.c. and it is pre-arranged from the factory to operate with one of these gas/pressure as indicated in the labels affixed on the appliance, package and Instruction booklet.

To convert the regulator for use with other liquid propane LP gas:

1. Unscrew by hand the upper cap of the regulator, remove the white plastic attachment from the cap, reverse its direction and screw it again firmly against the cap. The white plastic attachment has arrows indicating the position for natural gas (NAT) and LP gas (LP).
2. Screw by hand the metal cap in the original position on the regulator.

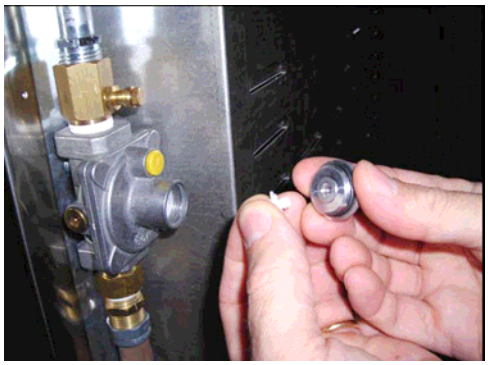

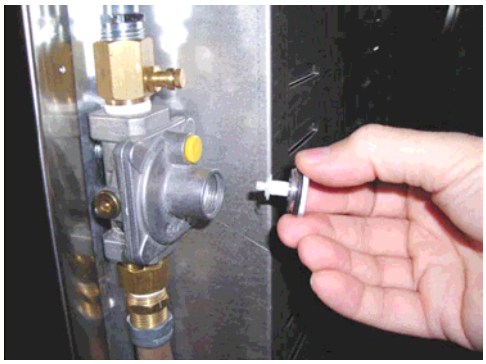

## STEP 2: SURFACE BURNERS

To replace the nozzles of the surface burners, lift up the burners and unscrew the nozzles shipped with the range using a 7 mm {sochet wrench).

Replace nozzles using the conversion set supplied with the range or by a Bertazzoni authorized parts warehouse. Each nozzle has a number indicating its flow diameter printed on the body. Consult the table on page 20 for matching nozzles to burners.

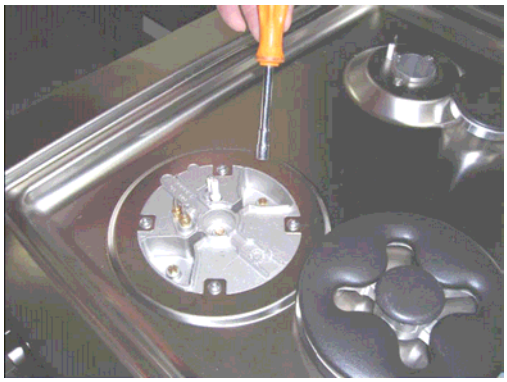

## STEP 3: MAIN OVEN BURNER

**To replace the nozzles of the main oven burner, start by removing the bottom panel of the oven.**

Loosen the screw located on the right side of the burner and pull out the burner from its support.

ATTENTION: pay extra attention to avoid damage to the igniter and thermocouple.

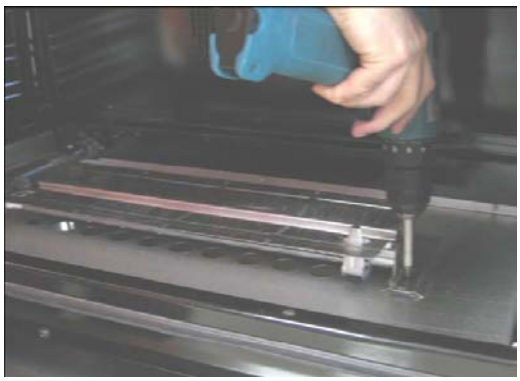

Unscrew the nozzle located inside the gas fitting using a 10 mm [ socket wrench].

Replace the nozzle using the conversion set supplied with the range or by a Bertazzoni authorized parts warehouse. Each nozzle has a number indicating its flow diameter printed on the body. Consult the table on page 20 for matching nozzles to burners.

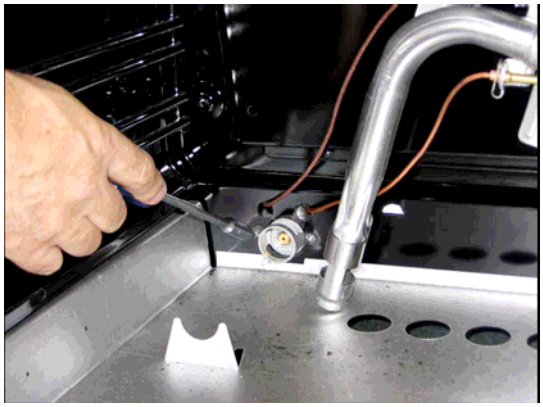

Adjust the primary airflow by loosening the screw P and setting the gap X in the Venturi cone to ½" (5/16" for natural gas).

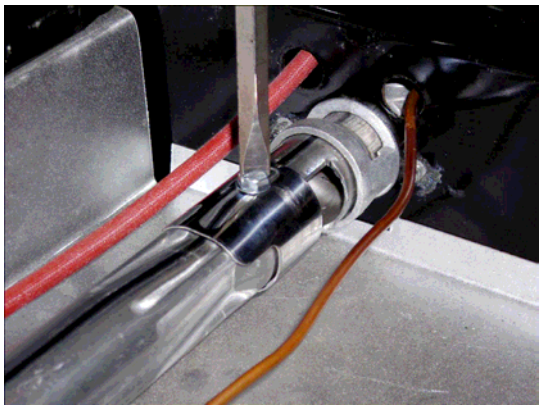

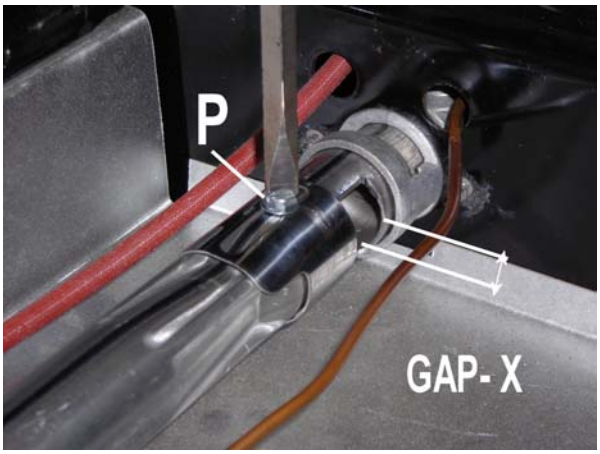


**STEP 4: BROILER BURNER**

Loosen the screw and pull out the burner from its support.

ATTENTION: pay extra attention to avoid damage to the igniter and thermocouple.

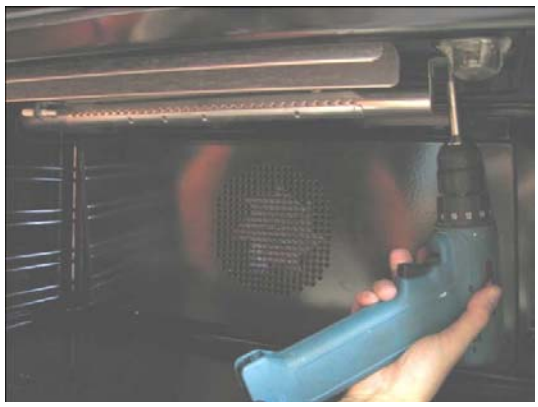

Using a 7 mm [name of the tool] unscrew the nozzle. Replace the nozzle using the conversion set supplied with the range or by a Bertazzoni authorized parts warehouse. Each nozzle has a number indicating its flow diameter printed on the body. Consult the table on page 20 for matching nozzles to burners.

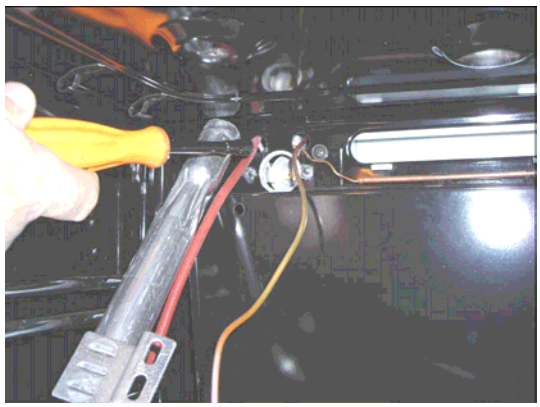

Adjust the gap X by setting it to fully open position.

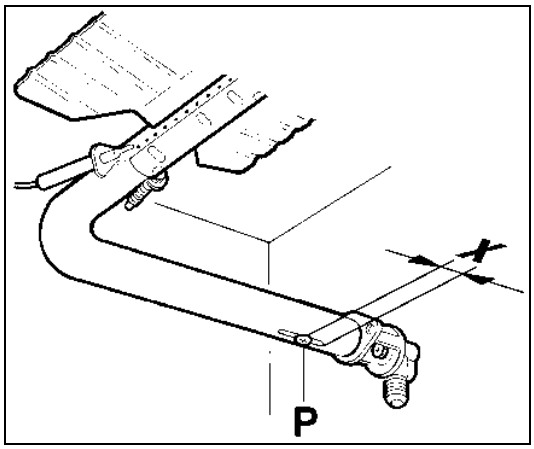

**STEP 5: VISUAL CHECKS**

**Before reinstalling the bottom panel, the following visual check must be performed to ensure that the conversion has been carried out properly and without damage to other components of the range.**

A) CONNECTION OF THERMOCOUPLES TO THERMOSTAT

The thermocouples for both broiler and main oven burner are connected to the same magnet. Tight gently the two connections alternating action on the two nuts. Do not fully tighten one thermocouple before having started to tighten the second one.

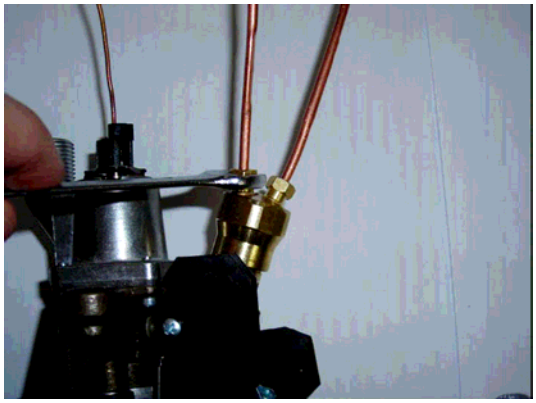

B) OVEN IGNITER AND THERMOCOUPLE POSITION

The appropriate gap between the tip of the spark plug or thermocouple and the burner shall be approximately 1/8''.

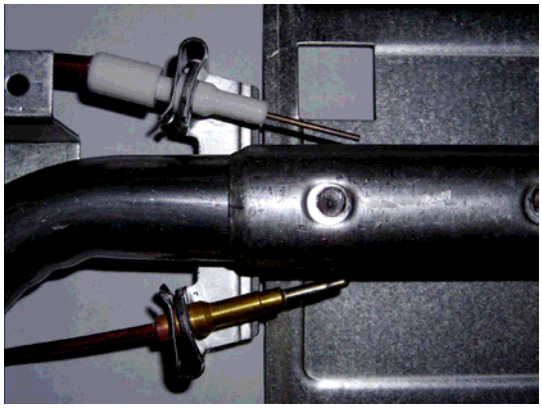

The tip of the spark plug or thermocouple must fully overlap at least the first gas emission hole of the burner.

**After performing all these visual checks, reinstall the bottom panel of the oven compartment and proceed to setting the minimum for each burner.**

## STEP 6: MINIMUM FLAME ADJUSTMENT

**WARNING!**

**These adjustments should be made only for use of the appliance with natural gas. For use with liquid propane gas, the choke screw must be fully turned in a clockwise direction.**

### SURFACE BURNERS

1. Light one burner at a time and set the knob to the MINIMUM position (small flame).
2. Remove the knob.
3. The range is equipped with a safety valve. Using a small-size slotted screwdriver, locate the choke valve on the valve body and turn the choke screw to the right or left until the burner flame is adjusted to desired minimum.
4. Make sure that the flame does not go out when switching quickly from the MAXIMUM to the MINIMUM position.

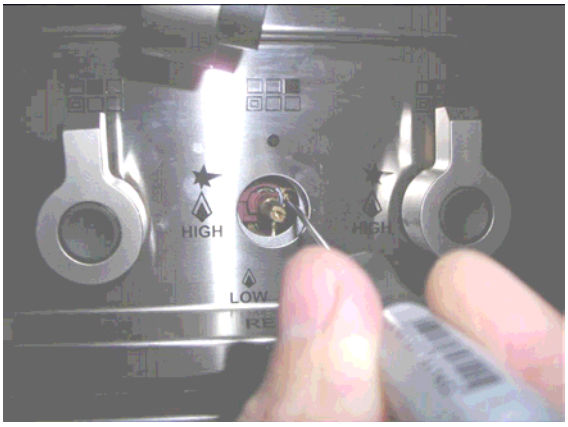


### OVEN BURNER

1. Set the oven temperature control knob to the MAXIMUM setting.
2. Close the oven door and operate the oven for at least 10 minutes.
3. Set the knob to the MINIMUM setting (corresponding to 250°F/120°C).
4. Remove the knob.
5. With a slotted screwdriver turn the choking screw (by-pass screw at the left side of the thermostat bar) and, while observing the flame at the same time through the bottom oven porthole, evaluate the consistency of the flame so it remains on when switching quickly from MINIMUM to MAXIMUM setting.

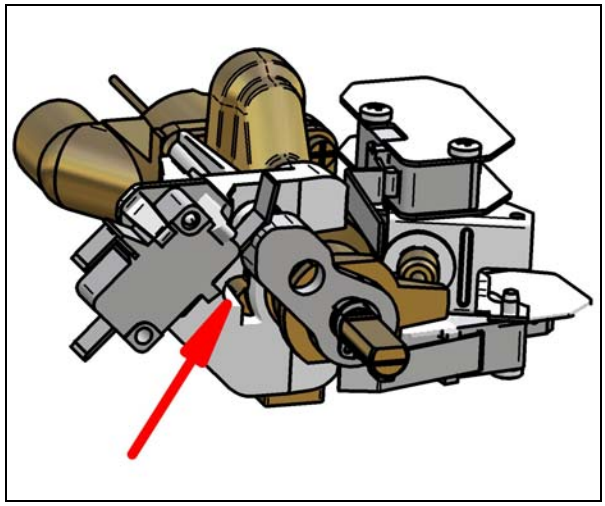

**Broiler burner:** the broiler burner always operates at maximum, therefore no minimum adjustment is required.

**Models X366GGVX (X36 6 00 X)** [M3Y0GTU4X(2 or 5)A]

| Burner | Position | Injector | Gas | Pressure | Max Rate | | Min Rate | | By-pass |
|---|---|---|---|---|---|---|---|---|---|
| | | diam. [mm.] | Type | [i.w.c.] | [BTU/h] | [W] | [BTU/h] | [W] | diam. [mm] |
| Auxiliary | Front R | 0,90 | NG | 4" | 3400 | 996 | 900 | 264 | Regulated |
| | | 0,54 | LP (Propane) | 11" | 3400 | 996 | 900 | 264 | 0,29 |
| Semi-Rapid | Rear L & C<br>Front C | 1,18 | NG | 4" | 6100 | 1787 | 1500 | 439 | Regulated |
| | | 0,70 | LP (Propane) | 11" | 6100 | 1787 | 1500 | 439 | 0,36 |
| Rapid | Rear R | 1,55 | NG | 4" | 10400 | 3047 | 2500 | 732 | Regulated |
| | | 0,92 | LP (Propane) | 11" | 10400 | 3047 | 2500 | 732 | 0,47 |
| Dual Burner | Front L Inner | 0,80 | NG | 4" | 2800 | 820 | 900 | 264 | Regulated |
| | | 0,49 | LP (Propane) | 11" | 2800 | 820 | 900 | 264 | 0,29 |
| | Front L Outer | N°2 x 1,15 | NG | 4" | 12000 | 3516 | 4500 | 1318 | Regulated |
| | | N°2 x 0,70 | LP (Propane) | 11" | 12000 | 3516 | 4500 | 1318 | 0,65 |
| Oven | Oven downside | 2,00 | NG | 4" | 16000 | 4688 | 4000 | 1172 | Regulated |
| | | 1,15 | LP (Propane) | 11" | 16000 | 4688 | 4000 | 1172 | 0,60 |
| Broiler | Oven upside | 1,90 | NG | 4" | 14500 | 4248 | Only Max | Only Max | No by-pass |
| | | 1,10 | LP (Propane) | 11" | 14500 | 4248 | Only Max | Only Max | No by-pass |

**Models X365GGVX (X36 5 00 X)** [M3W0GTU4X(2 or 5)A]

| Burner | Position | Injector | Gas | Pressure | Max Rate | | Min Rate | | By-pass |
|---|---|---|---|---|---|---|---|---|---|
| | | diam. [mm.] | Type | [i.w.c.] | [BTU/h] | [W] | [BTU/h] | [W] | diam. [mm] |
| Auxiliary | Front R | 0,90 | NG | 4" | 3400 | 996 | 900 | 264 | Regulated |
| | | 0,54 | LP (Propane) | 11" | 3400 | 996 | 900 | 264 | 0,29 |
| Semi-Rapid | Rear L and R | 1,18 | NG | 4" | 6100 | 1787 | 1500 | 439 | Regulated |
| | | 0,70 | LP (Propane) | 11" | 6100 | 1787 | 1500 | 439 | 0,36 |
| Rapid | Front L | 1,55 | NG | 4" | 10400 | 3047 | 2500 | 732 | Regulated |
| | | 0,92 | LP (Propane) | 11" | 10400 | 3047 | 2500 | 732 | 0,47 |
| Dual Burner | Centre Inner | 0,80 | NG | 4" | 2800 | 820 | 900 | 264 | Regulated |
| | | 0,49 | LP (Propane) | 11" | 2800 | 820 | 900 | 264 | 0,29 |
| | Centre Outer | N°2 x 1,15 | NG | 4" | 12000 | 3516 | 4500 | 1318 | Regulated |
| | | N°2 x 0,70 | LP (Propane) | 11" | 12000 | 3516 | 4500 | 1318 | 0,65 |
| Oven | Oven downside | 2,00 | NG | 4" | 16000 | 4688 | 4000 | 1172 | Regulated |
| | | 1,15 | LP (Propane) | 11" | 16000 | 4688 | 4000 | 1172 | 0,60 |
| Broiler | Oven upside | 1,90 | NG | 4" | 14500 | 4248 | Only Max | Only Max | No by-pass |
| | | 1,10 | LP (Propane) | 11" | 14500 | 4248 | Only Max | Only Max | No by-pass |

## INSTALLATION CHECKLIST

1. Is the range mounted on its legs?
2. Is the backguard securely connected?
3. Has the anti-tip device been properly installed?
4. Does the clearance from the side cabinets comply with the manufacturers directions?
5. Is the electricity properly grounded?
6. Is the gas service line connected following the directions of the manufacturer?
7. Have all the proper valves, stoppers and gasket been installed between the range and the service line?
8. Has the gas connection been checked for leaks?
9. Has the range been set for the type of gas available in the household?
10. Is the ignition of all oven burners functioning properly?
11. Is the air flow to the over and broiler burners properly adjusted?
12. Does the flame appear sharp blue, with no yellow tipping, sooting or flame lifting?
13. Has the minimum setting for all burners been adjusted?
14. Is the oven and broiler ignition working properly?
15. Does the oven light work properly?

## FINAL PREPARATION

Before using the oven, remove any protective wrap from the stainless steel.

All stainless steel body parts should be wiped with hot, soapy water and with a liquid stainless steel cleanser.

If buildup occurs, do not use steel wool, abrasive cloths, cleaners, or powders! If it is necessary to scrape stainless steel to remove encrusted materials, soak with hot, wet cloths to loosen the material, then use a wood or nylon scraper. Do not use a metal knife, spatula, or any other metal tool to scrape stainless steel! Scratches are almost impossible to remove.

Before using the oven for food preparation, wash the cavity thoroughly with a warm soap and water solution to remove film residues and any dust or debris from installation, then rinse and wiped dry.

WARNING!

**Do not to cover the holes inside the oven with aluminium foil.**

**Do not to cover the worktop with aluminium foil.**

**Do not store any flammable object or objects under pressure in the storage compartment.**

Keep the area of operation of the range free from combustible materials, gasoline and other flammable vapors and liquid.

Do not store dangerous or flammable materials in the cabinets above the appliance.

Do not use the appliance for space heating.

Do not use aerosol sprays in the vicinity of the appliance while cooking.

**Do not sit or step on the oven door.**

**Do not use oven compartment for storage.**

## ROOM VENTILATION

The use of a gas cooking appliance generates heat and humidity in the room where it is installed. Proper ventilation in the room is needed. Make sure the kitchen is equipped with a range hood of appropriate power (400 CFM minimum). Activate the exhaust fan/range hood when possible. Intensive and continuous use of the appliance may require additional ventilation, for example by opening a window.

## SURFACE BURNER LAYOUT

Reflect names from brochure
1. Small Burner
2. Medium burner
3. Rapid burner
4. Dual burner (Power burner)

Model
**X365GGVX** (**X36 5 00 X**)
[M3W0GTU4X(2 or 5)A]

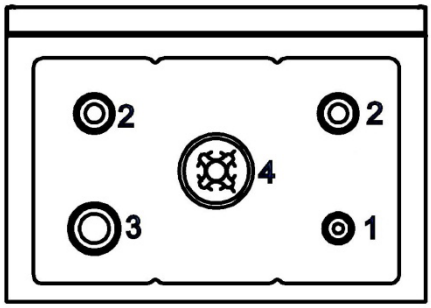


Model
**X366GGVX** (**X36 6 00 X)**
[M3Y0GTU4X(2 or 5)A]

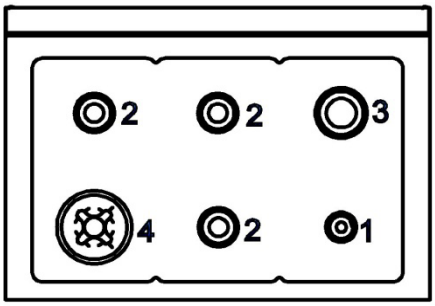

# SURFACE COOKING

## SYMBOLS

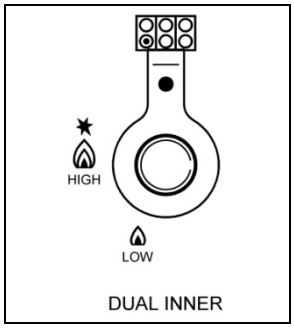




Burner position (in this case front right burner).

Maximum temperature setting / Recommended control knob position for burner ignition

Minimum temperature setting

## SURFACE BURNER OPERATION

THERMOCOUPLE SAFETY VALVE

Each surface burner of a Bertazzoni range is equipped with a thermocouple safety device.

The thermocouple opens the flow of gas to the burner only when hot. Should the flame go off, the thermocouple will immediately close the gas flow to the burner eliminating any risk to your home.

For faster activation of the thermocouple, always light the burners on maximum power. This will allow the thermocouple to reach the optimum temperature in the fastest time.

ELECTRIC IGNITION

To activate the electric ignition, simply turn the control knob counter-clockwise to maximum power ((✶position). Press the knob to start the flow of gas and the ignition spark. The spark will released at the metal tip of the white ceramic pin located on the side of the burner. Once the flame is on, release the control knob gently.

If the flame turns off, repeat the above procedure.

The dual power-burner is composed by two burners (inside and outside). Each burner is activated by a separate control knob. The two burners can be operated separately or together for maximum power. To activate the power-burner, turn on the central burner first, then turn on the external ring.

ATTENTION: do not ignite burners if the black burner cap is not installed or not centred. The flame will be irregular.

MANUAL IGNITION

Manual ignition is always possible even when the power is cut off or in the event of power failure.

Turn the control knob counter-clockwise to the MAXIMUM position. Light the flame with a kitchen lighter or with a match.

## TIPS FOR USING BURNERS CORRECTLY

**WARNING**!

**KEEP CHILDREN AT A SAFE DISTANCE FROM THE APPLIANCE DURING OPERATION.**

**DO NOT ALLOW CHILDREN TO OPERATE THE APPLIANCE.**

1. Always check that the burner caps are properly installed before operation.

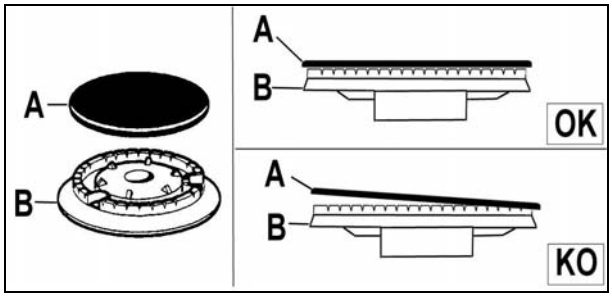


2. Verify that the flame of the worktop burners is completely blue and with regular aspect as shown below.

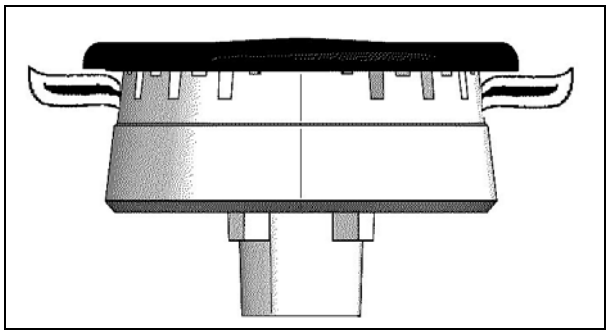

3. Always adjust the burner flame so it does not extend beyond the edge of the pan.

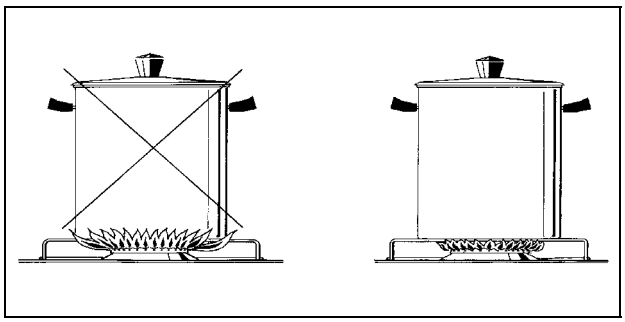

## TIPS FOR USING PANS CORRECTLY

ATTENTION!

Always ensure that bottom and handles of pans do not protrude from the worktop.

When cooking with flammable fat such as oil, do not leave the range unattended.

Use pots of the appropriate size on each burner following the indication of the diagram below.

| Burner | Recommended pan size **inches (mm)** |
|---|---|
| Small | 3½”-51/2”(90 – 140) |
| Medium | 51/2”- 101/4”(140 – 260) |
| Large | 71/8”- 101/4” (180 – 260) |
| Dual burner | 82/3”-101/4” (220 – 260) |

When boiling liquids, turn the knob to the MINIMUM position once boiling is reached to avoid overflow. .

Always use pots with matching lid.

Dry the bottom of pans before operation.

Use pots with a flat, thick bottom (except for wok cooking).

WOK COOKING: always use the wok adapter supplied with the range. Wok pan external diameter shall not be smaller than 10” (25cm) and larger than 16” (40cm).

SIMMERING: use the simmer ring supplied with the range.

# OVEN COOKING

## SYMBOLS

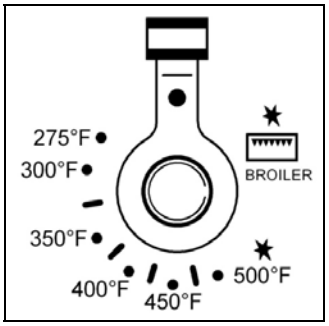

Thermal bake selector



Broiler selector

★ Recommended control knob position for burner ignition

275F Mimimum oven temperature setting

550F Maximum oven temperature setting

**Oven on/off** Oven status indicator.

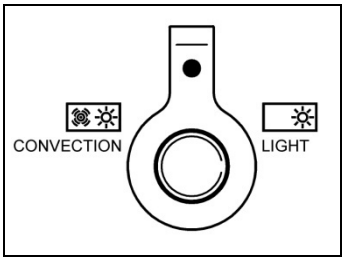

Convection fan and oven compartment light switch

Oven compartment light switch for baking or broiling

## OVEN SHELVES

Bertazzoni ranges are equipped with commercial grade shelves and a enamel cooking tray.

Shelves are mounted on the appropriate guides situated on the sides of the oven compartment. Insert the shelf between top and bottom guide in any of the 4 positions available.

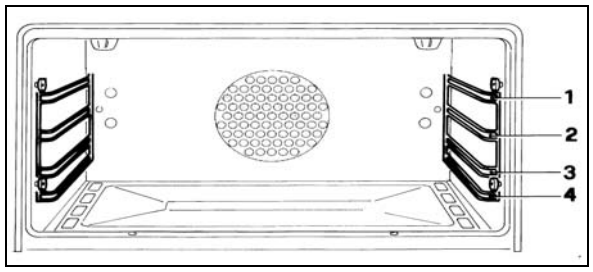


To keep the oven as clean as possible, cook meat on the tray .

When available, always follow recipe book directions. Personal experience will help to determine any variations in the values reported in the table. In any case, it is recommended to follow the instructions of the specific recipe being used.

## GAS OVEN OPERATION

**WARNING**

NEVER cover any slots, holes or passages in the oven botton or cover an entire rack with materials such as aluminum foil. Doing so blocks air flow through the oven and may cause carbon monoxide poisoning. Aluminum foil linings may also trap heat, causing a fire hazard.

### THERMOCOUPLE SAFETY VALVE

Bertazzoni gas ovens are equipped with a thermocouple safety device and a thermostat to set the proper cooking temperature.

The thermocouple opens the flow of gas to the burner only when hot. Should the flame go off, the thermocouple will immediately close the gas flow to the burner eliminating any risk to your home.

For faster activation of the thermocouple, always light the burners on maximum power. This will allow the thermocouple to reach the optimum temperature in the fastest time.

### ATTENTION!

**When using the oven for the first time it should be operated for 15-30 minutes at a temperature of about 500°F/260°C without cooking anything inside in order to eliminate any moisture and odours from the internal insulation.**

## ELECTRIC IGNITION

### WARNING!

**Always keep the oven door open when lighting the oven.**

**Do not operate ignition device for more than 15 seconds. If after that period the burner has not been lit, open the oven door and wait 60 seconds before trying to light the oven again.**

With the oven door partially open, turn the control knob to the maximum temperature setting (✶position).

Press the control knob to start the gas flow and the ignition spark.

Wait 10 seconds after the burner has been completely lit before releasing the knob. This will allow the thermocouple to reach its operating temperature.

The gas oven operation is indicated by a blue light on the left side of the control panel.

Before closing the oven door, visually check that the flame is on through the portholes on the oven compartment bottom panel. If no flame is visible, repeat the procedure.

After lighting the burner and setting the desired temperature, wait about 15 minutes before putting food in to preheat the oven.

### WARNING

**If the oven burner flame is extinguished accidentally during operation, turn the temperature control knob counter-clockwise to the off position. Wait at least 60 seconds before attempting to light the oven again.**

## CONVECTION COOKING

Bertazzoni gas oven are equipped with a CONVECTION fan.

In convection mode, the fan situated at the back of the oven compartment creates horizontal forced-air circulation. The advantages of convection cooking are:

1. uniform distribution of heat throughout the oven cavity (meat no longer needs to be turned while roasting)

2. cooking different types of food at the same time, without flavour transmission from one dish to the other.

Pre-heating the oven is not necessary. For delicate pastry baking, it is recommended to heat the oven before inserting the pastry trays.

To activate the convection fan use the selector placed on control panel.

## COOKING WITH THE GAS BROILER

**WARNING**

**Always keep the oven door open when lighting the gas broiler.**

The gas broiler is activated with the same control knob used for setting the oven temperature.

To activate the broiler, turn the control knob clockwise in the broiler position.

The broiler burner always operates at maximum power and therefore there is no temperature setting.

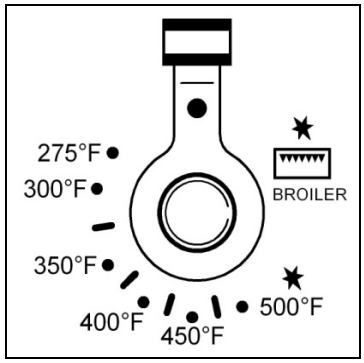


### ELECTRIC IGNITION

With the oven door completely open, turn the oven control knob to the broiler position.

Press the knob to start the gas flow and the ignition spark. Wait about 10 seconds after the burner has been completely lit before releasing the control knob. This will allow the thermocouple to reach its operating temperature.

Before closing the oven door, visually check that the flame is on through the portholes on the oven compartment bottom panel. If no flame is visible, repeat the procedure.

**ATTENTION:** always use the small wire shelf inside the enamel tray supplied with the range; position the tray on the top oven shelf.

Gas broiler operation is indicated by the indicator on the left side of the control panel.

**IMPORTANT:** when broiling food keep the door closed.

## MAINTAINING YOUR RANGE

### REPLACING THE OVEN LIGHT BULB

**WARNING!**
**Disconnect power before servicing unit.**

To replace the oven light bulb, unscrew the protection cap that projects out inside the oven.

Spare bulbs are available at factory-authorized parts resellers listed on page 4.

Alternatively use commercial bulbs type [list SPECS]

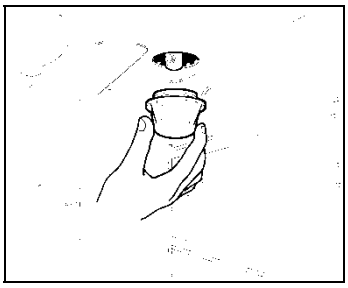

### COOLING FAN FAILURE

Bertazzoni ranges are equipped with a cooling fan. The fan starts operating each time the oven knob is on a position different from 0 (zero).

The fan circulates the air between the control panel and the oven door, allowing the control panel and the oven door to remain cool while cooking.

Malfunction of the cooling fan is indicated by the FAN FAILURE light situated at the left side of the control panel. If the light is on, turn off all burners as soon as possible and call the customer service hotline to schedule service by a factory-trained professional.

## CLEANING YOUR RANGE

ATTENTION!
Never use abrasive cleaners!
Scratches on the stainless steel surfaces are permanent.

**Do not clean the range when hot!**

Cleaning after installation: use a stainless steel cleaning product or wipe to eliminate the glue residues of the blue protection film after removal.

Cleaning the worktop: periodically clean the burner heads, the cast iron pan supports and the burner caps using warm water. **Remove burned food and fat residues with a rubber spatula . If food residue prevent the smooth operation of the control knobs, call the customer servce hotline to schedule service by a factory-trained professional.**

**Cleaning stainless steel:** for best results use a stainless steel cleaner product with a soft sponge or wipe. Alternatively use a soft sponge or cloth with a warm soap and water solution. Never use abrasive powders or liquids!

**Cleaning the burner caps:** lift the burner caps from the burner heads and wash them in a warm soap and water solution. Dry thoroughly before using them again. Before reinstalling them on the burner head, check that the gas flow holes are not clogged with food residues or cleaning product residues.

**Cleaning Enamel:** enamelled parts should be cleaned frequently with awarm soap and water solution applied with a soft sponge or wipe. Never use abrasive powders or liquids! Do not leave acid or alkaline substances on the enamelled parts (such as vinegar, lemon juice, salt, tomato sauce, etc.). Use a rubber spatula to remove fat residues.

**Cleaning glass door:** clean the glass using a non-abrasive sponge or wipe with a warm soap and warm water solution. Use a rubber spatula to remove fat residues.

**ATTENTION:** while cleaning the door, avoid spillage of food resideues and cleaning products in the venting holes situated on the top side of the door. To clean the inside of the oven door, call a factory-trained professional.

**ATTENTION:** for further details about cleaning of the appliance, please contact your appliance retailer.

## IMPORTANT APPLIANCE INFORMATION

MODEL _____

DATE INSTALLED _____

DEALER _____

_____

INSTALLER _____

_____

SERVICER _____

_____

BERTAZZONI SpA
Via Palazzina 8
42016 Guastalla RE
ITALY

**WWW.BERTAZZONI-ITALIA.COM**

# SPARE PART LIST

| NUMBER | COMPONENT | DESCRIPTION | X365GGV | X366GGV | BEIGE | YELLOW | BURGUNDY RED | BLACK | RED | BLUE | GREEN | PURE WHITE |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 11 | 202387 | BURNERS FLASK | 2 | 2 | | | | | | | | |
| 18 | 202432 | PART FOR DUAL WOK AND SEMI RAPID BURNERS | | 1 | | | | | | | | |
| 38 | 306003 | THERMOSTAT CLIP | 2 | 2 | | | | | | | | |
| 55 | 404198 | WORKTOP FRONTGUARD | 1 | 1 | | | | | | | | |
| 80 | 504160 | COVER FOR SMALL FLAME SPREADER | 1 | 1 | | | | | | | | |
| 81 | 504161 | COVER FOR MEDIUM BURNER | 2 | 3 | | | | | | | | |
| 82 | 504162 | COVER FOR RAPID BURNER | 1 | 1 | | | | | | | | |
| 85 | 504187 | COVER IN FOR DUAL BURNER FLAME SPREADER | 1 | 1 | | | | | | | | |
| 86 | 504186 | COVER OUT FOR DUAL BURNER FLAME SPREADER | 1 | 1 | | | | | | | | |
| 105 | 202431 | UP SUPPORT FOR AXIAL COOLIN FAN | 1 | 1 | | | | | | | | |
| 106 | 202523 | DOWN SUPPORT FOR AXIAL COOLIN FAN | 1 | 1 | | | | | | | | |
| 109 | 202384 | INSIDE FLAP DOOR | 1 | 1 | | | | | | | | |
| 117 | 101353 | PROTECTION FOR FAN ASSISTED OVEN | 1 | 1 | | | | | | | | |
| 120 | 101048 | BLACK OVEN DRIP TRAY | 1 | 1 | | | | | | | | |
| 138 | 202448 | DISHWARMER BOTTOM | 1 | 1 | | | | | | | | |
| 160 | 202262 | BRIDLE FOR FIXING GAS VALVES | 1 | 1 | | | | | | | | |
| 205 | 410571 | PROFILE FOR GLASS DOOR | 1 | 1 | | | | | | | | |
| 206 | 410572 | PROFILE FOR GLASS DOOR | 1 | 1 | | | | | | | | |
| 207 | 308034 | BUMPER | 2 | 2 | | | | | | | | |
| 274 | 202428 | HORIZONTAL VENT | 1 | 1 | | | | | | | | |
| 311 | 309010 | RING FOR GRID SUPPORT | 4 | 4 | | | | | | | | |
| 329 | 309141 | INSIDE DOOR SPACER | 2 | 2 | | | | | | | | |
| 385 | 306024 | SPRING FOR SPARK PLUG | 6 | 7 | | | | | | | | |
| 424 | 415071 | SPARK PLUG FOR DUAL BURNER | 2 | 2 | | | | | | | | |
| 425 | 415054 | SPARK PLUG 350MM | 2 | 3 | | | | | | | | |
| 426 | 415057 | SPARK PLUG 700MM | 2 | 2 | | | | | | | | |
| 427 | 415076 | SPARK PLUG OVEN | 1 | 1 | | | | | | | | |
| 429 | 415077 | SPARK PLUG GRILL | 1 | 1 | | | | | | | | |
| 430 | 415064 | ACCUMULATOR 4U | 2 | 1 | | | | | | | | |
| 439 | 415065 | ACCUMULATOR 6U | | 1 | | | | | | | | |
| 441 | 404187 | RIGHT GRID FOR OVEN | 1 | 1 | | | | | | | | |
| 442 | 404189 | SHELF OVEN | 2 | 2 | | | | | | | | |
| 443 | 404497 | GRID FOR TRAY | 1 | 1 | | | | | | | | |
| 444 | 202407 | FLASK HINGE | 2 | 2 | | | | | | | | |
| 446 | 405074 | OVEN DOOR HINGE | 2 | 2 | | | | | | | | |
| 447 | 404188 | LEFT GRID FOR OVEN | 1 | 1 | | | | | | | | |
| 473 | 408069 | SIMMER PLATE | 1 | 1 | | | | | | | | |
| 478 | 410558 | FLAP DOOR | 1 | 1 | | | | | | | | |
| 478 | 125040 | FLAP DOOR BEIGE | | | 1 | | | | | | | |
| 478 | 125016 | FLAP DOOR YELLOW | | | | 1 | | | | | | |
| 478 | 125004 | FLAP DOOR BURGUNDY RED | | | | | 1 | | | | | |
| 478 | 125028 | FLAP DOOR BLACK | | | | | | 1 | | | | |
| 478 | 125034 | FLAP DOOR RED | | | | | | | 1 | | | |
| 478 | 125010 | PLAP DOOR BLUE | | | | | | | | 1 | | |
| 478 | 125022 | FLAP DOOR GREEN | | | | | | | | | 1 | |
| 478 | 125046 | FLAP DOOR PURE WHITE | | | | | | | | | | 1 |
| 544 | 504195 | OVEN BURNER + SPARK PLUG + THERMOC. | 1 | 1 | | | | | | | | |
| 546 | 505013 | SUPPORT FOR GRILL BURNER NOZZLE | 1 | 1 | | | | | | | | |
| 561 | 508025 | TERMOCOUPLE MM300 | 1 | 2 | | | | | | | | |
| 562 | 508021 | TERMOCOUPLE MM600 | 2 | 2 | | | | | | | | |
| 564 | 508026 | THERMOCOUPLE MM1400 | 2 | 2 | | | | | | | | |
| 565 | 508027 | TERMOCOUPLE MM800 | 1 | 1 | | | | | | | | |
| 566 | 508034 | TERMOCOUPLE ULTRA-RAPID BURNER | 2 | 2 | | | | | | | | |
| 611 | 603020 | OVEN CONVECTION FAN | 1 | 1 | | | | | | | | |
| 612 | 603019 | COOLING FAN | 1 | 1 | | | | | | | | |
| 620 | 602039 | COMMUTATOR | 1 | 1 | | | | | | | | |
| 623 | 608046 | OVEN BULB WITH HOLDER | 2 | 2 | | | | | | | | |
| 648 | 601991 | TERMINAL SEPARATOR | 1 | 1 | | | | | | | | |
| 649 | 608047 | SMALL WARNING LIGHT | 1 | 1 | | | | | | | | |
| 649 | 608047 | SMALL WARNING LIGHT | 1 | 1 | | | | | | | | |
| 667 | 503112 | THERMOSTAT | 1 | 1 | | | | | | | | |
| 670 | 504128 | SMALL FLAME SPREADER | 1 | 1 | | | | | | | | |
| 671 | 504129 | MEDIUM FLAME SPREADER | 2 | 3 | | | | | | | | |
| 672 | 504130 | RAPID FLAME SPREADER | 1 | 1 | | | | | | | | |
| 675 | 504189 | ULTRA RAPID FLAME SPREADER | 1 | 1 | | | | | | | | |
| 702 | 408058 | ADAPTER FOR WOK BURNER PAN SUPPORT | 1 | 1 | | | | | | | | |
| 715 | 604062 | DASYCHAIN SWITCH | 1 | | | | | | | | | |
| 715 | 604063 | DAISYCHAIN SWITCH | | 1 | | | | | | | | |
| 760 | 510507 | SMALL BURNER | 1 | 1 | | | | | | | | |
| 761 | 510508 | SEMI RAPID BURNER | 2 | 3 | | | | | | | | |
| 762 | 510509 | RAPID BURNER | 1 | 1 | | | | | | | | |
| 764 | 510511 | DUAL BURNER | 1 | 1 | | | | | | | | |
| 770 | 202405 | WARMER DROWER UPPERSIDE PROTECTION PANEL | 1 | 1 | | | | | | | | |
| 884 | 502179 | GAS VALVE BY PASS 029 SMALL/DUAL INNER | 2 | 2 | | | | | | | | |
| 885 | 502148 | GAS VALVE BY PASS 036 SEMI-RAPID | 2 | 3 | | | | | | | | |
| 886 | 502180 | GAS VALVE BY PASS 047 RAPID | 1 | 1 | | | | | | | | |
| 887 | 502150 | GAS VALVE BY PASS 065 DUAL OUTER | 1 | 1 | | | | | | | | |
| 917 | 200327 | STAINLESS STEEL SIDE | 2 | 2 | | | | | | | | |
| 917 | 125039 | SIDE BEIGE | | | 2 | | | | | | | |
| 917 | 125015 | SIDE YELLOW | | | | 2 | | | | | | |
| 917 | 125003 | SIDE BURGUNDY RED | | | | | 2 | | | | | |
| 917 | 125027 | SIDE BLACK | | | | | | 2 | | | | |

| | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 917 | 125033 | SIDE RED | | | | | | | 2 | | | |
| 917 | 125009 | SIDE BLUE | | | | | | | | 2 | | |
| 917 | 125021 | SIDE GREEN | | | | | | | | | 2 | |
| 917 | 125045 | SIDE PURE WHITE | | | | | | | | | | 2 |
| 929 | 202389 | RIGHT VERTICAL VENT | 1 | 1 | | | | | | | | |
| 930 | 202214 | FEET SUPPORT | 2 | 2 | | | | | | | | |
| 940 | 201168 | FIXING FOR WORK TABLE | 2 | 2 | | | | | | | | |
| 943 | 308031 | BUMPER FOR C.I. GRIDS AND DISHWARMER | 4 | 4 | | | | | | | | |
| 947 | 403343 | HANDLE TERMINAL | 2 | 2 | | | | | | | | |
| 960 | 408053 | CAST IRON PAN SUPPORT 1 BURNER | 1 | | | | | | | | | |
| 965 | 408052 | CAST IRON PAN SUPPORT 2 BURNERS | 2 | 3 | | | | | | | | |
| 972 | 202360 | WORK TABLE FIXING | 4 | 4 | | | | | | | | |
| 1041 | 401904 | GAS VALVE KNOB | 4 | 5 | | | | | | | | |
| 1043 | 401905 | GAS THERMOSTAT KNOB | 1 | 1 | | | | | | | | |
| 1044 | 401906 | ELECTRIC KNOB | 1 | 1 | | | | | | | | |
| 1046 | 401961 | DUAL IN KNOB | 1 | 1 | | | | | | | | |
| 1047 | 401962 | DUAL OUT KNOB | 1 | 1 | | | | | | | | |
| 1143 | 910666 | UPSTAND KIT | 1 | 1 | | | | | | | | |
| 1406 | 403344 | OVEN DOOR HANDLE | 1 | 1 | | | | | | | | |
| 1407 | 406370 | OVEN DOOR GLASS | 2 | 2 | | | | | | | | |
| 1411 | 411090 | GASKET FOR OVEN FRONT 4 SIDE | 1 | 1 | | | | | | | | |
| 1415 | 602040 | THERMOSWITCH FOR COOLING FAN | 1 | 1 | | | | | | | | |
| 1419 | 411091 | GASKET FOR OVEN FRONT 1 SIDE | 1 | 1 | | | | | | | | |
| 1421 | 406369 | IMMER OVEN GLASS | 1 | 1 | | | | | | | | |
| 1508 | 410570 | STAINLESS STEEL OVEN DOOR | 1 | 1 | | | | | | | | |
| 1508 | 125041 | OVEN DOOR BEIGE | | | 1 | | | | | | | |
| 1508 | 125017 | OVEN DOOR YELLOW | | | | 1 | | | | | | |
| 1508 | 125005 | OVEN DOOR BURGUNDY RED | | | | | 1 | | | | | |
| 1508 | 125029 | OVEN DOOR BLACK | | | | | | 1 | | | | |
| 1508 | 125035 | OVEN DOOR RED | | | | | | | 1 | | | |
| 1508 | 125011 | OVEN DOOR BLUE | | | | | | | | 1 | | |
| 1508 | 125023 | OVEN DOOR GRENN | | | | | | | | | 1 | |
| 1508 | 125047 | OVEN DOOR PURE WHITE | | | | | | | | | | 1 |
| 1602 | 210474 | CONTROL PANEL | 1 | | | | | | | | | |
| 1602 | 210473 | CONTROL PANEL | | 1 | | | | | | | | |
| 1603 | 309119 | BRIDLE FOR FIXING GAS VALVES/THERMOSTAT | 1 | 2 | | | | | | | | |
| 1603 | 309119 | BRIDLE FOR FIXING GAS VALVES/THERMOSTAT | 1 | 1 | | | | | | | | |
| 1608 | 501632 | ALL.TUBE FOR OVEN BURNER | 1 | 1 | | | | | | | | |
| 1609 | 505032 | OVEN NOZZLE SUPPORT | 1 | 1 | | | | | | | | |
| 1614 | 201165 | BACK PANEL | 1 | 1 | | | | | | | | |
| 1615 | 202422 | CONTROL SUPPORT | 1 | 1 | | | | | | | | |
| 1617 | 608045 | SMALL BLUE BUD | 1 | 1 | | | | | | | | |
| 1622 | 608025 | SMALL RED BUD | 1 | 1 | | | | | | | | |
| 1624 | 200316 | WORK TABLE | 1 | | | | | | | | | |
| 1624 | 200317 | WORK TABLE | | 1 | | | | | | | | |
| 1627 | 501628 | GAS COLLECTOR | 1 | | | | | | | | | |
| 1627 | 501629 | GAS COLLECTOR | | 1 | | | | | | | | |
| 1628 | 501634 | TUBE FOR RIGHT FRONT BURNER | 1 | 1 | | | | | | | | |
| 1631 | 501635 | TUBE FOR RIGHT BACK BURNER | 1 | 1 | | | | | | | | |
| 1639 | 202390 | LEFT VERTICAL VENT | 1 | 1 | | | | | | | | |
| 1644 | 414048 | S.STEEL LEG | 4 | 4 | | | | | | | | |
| 1645 | 414031 | BASE FOR LEGS | 4 | 4 | | | | | | | | |
| 1646 | 501633 | GRILL THERMOSTAT TUBE | 1 | 1 | | | | | | | | |
| 1661 | 202111 | PROTECTION PANEL FOR OVEN BURNER M9/D2 | 1 | 1 | | | | | | | | |
| 1671 | 101116 | OVEN BOTTOM PANEL BLACK M9/D2 | 1 | 1 | | | | | | | | |
| 1673 | 101356 | BACK PANEL | 1 | 1 | | | | | | | | |
| 1674 | 101349 | UPPER OVEN PANEL BLACK | 1 | 1 | | | | | | | | |
| 1677 | 101367 | FRONT PANEL BLACK | 1 | 1 | | | | | | | | |
| 1679 | 101190 | SIDE PANEL FOR OVEN | 2 | 2 | | | | | | | | |
| 1685 | 201166 | REAR VENT STACK | 2 | 2 | | | | | | | | |
| 1686 | 201167 | FRONT VENT STACK | 2 | 2 | | | | | | | | |
| 1687 | 202404 | BACK ENCLOSURE METAL PANEL | 1 | 1 | | | | | | | | |
| 1705 | 410563 | OVEN GLASS SUPPORT | 1 | 1 | | | | | | | | |
| 1800 | 501640 | REAR CENTRAL TUBE | | 1 | | | | | | | | |
| 1801 | 501636 | TUBE FOR LEFT BACK BURNER | 1 | 1 | | | | | | | | |
| 1802 | 501641 | FRONT CENTRAL TUBE | | 1 | | | | | | | | |
| 1803 | 501643 | TUBE FOR EXTERNAL DUAL BURNER | | 1 | | | | | | | | |
| 1804 | 501642 | TUBE FOR INTERNAL DUAL BURNER | | 1 | | | | | | | | |
| 1805 | 501639 | EXTERNAL CENTRAL TUBE | 1 | | | | | | | | | |
| 1806 | 501638 | TUBE FOR INTERNAL DUAL BURNER | 1 | | | | | | | | | |
| 1807 | 501637 | TUBE FOR FRONT LEFT BURNER | 1 | | | | | | | | | |
| 4106 | 405078 | HINGE FOR FLAP DOOR | 2 | 2 | | | | | | | | |
| 4301 | 200328 | RIGHT SIDE PROFILE | 1 | 1 | | | | | | | | |
| 4301 | 125038 | RIGHT SIDE PROFILE BEIGE | | | 1 | | | | | | | |
| 4301 | 125014 | RIGHT SIDE PROFILE YELLOW | | | | 1 | | | | | | |
| 4301 | 125002 | RIGHT SIDE PROFILE BURGUNDY RED | | | | | 1 | | | | | |
| 4301 | 125026 | RIGHT SIDE PROFILE BLACK | | | | | | 1 | | | | |
| 4301 | 125032 | RIGHT SIDE PROFILE RED | | | | | | | 1 | | | |
| 4301 | 125008 | RIGHT SIDE PROFILE BLUE | | | | | | | | 1 | | |
| 4301 | 125020 | RIGHT SIDE PROFILE GREEN | | | | | | | | | 1 | |
| 4301 | 125044 | RIGHT SIDE PROFILE PURE WHITE | | | | | | | | | | 1 |
| 4302 | 200329 | LEFT SIDE PROFILE | 1 | 1 | | | | | | | | |
| 4302 | 125037 | LEFT SIDE PROFILE BEIGE | | | 1 | | | | | | | |
| 4302 | 125013 | LEFT SIDE PROFILE YELLOW | | | | 1 | | | | | | |
| 4302 | 125001 | LEFT SIDE PROFILE BURGUNDY RED | | | | | 1 | | | | | |
| 4302 | 125025 | LEFT SIDE PROFILE BLACK | | | | | | 1 | | | | |
| 4302 | 125031 | LEFT SIDE PROFILE RED | | | | | | | 1 | | | |
| 4302 | 125007 | LEFT SIDE PROFILE BLUE | | | | | | | | 1 | | |
| 4302 | 125019 | LEFT SIDE PROFILE GREEN | | | | | | | | | 1 | |
| 4302 | 125043 | LEFT SIDE PROFILE PURE WHITE | | | | | | | | | | 1 |
| 5140 | 504185 | GRILL BURNER + SPARK PLUG + THERMOC. | 1 | 1 | | | | | | | | |

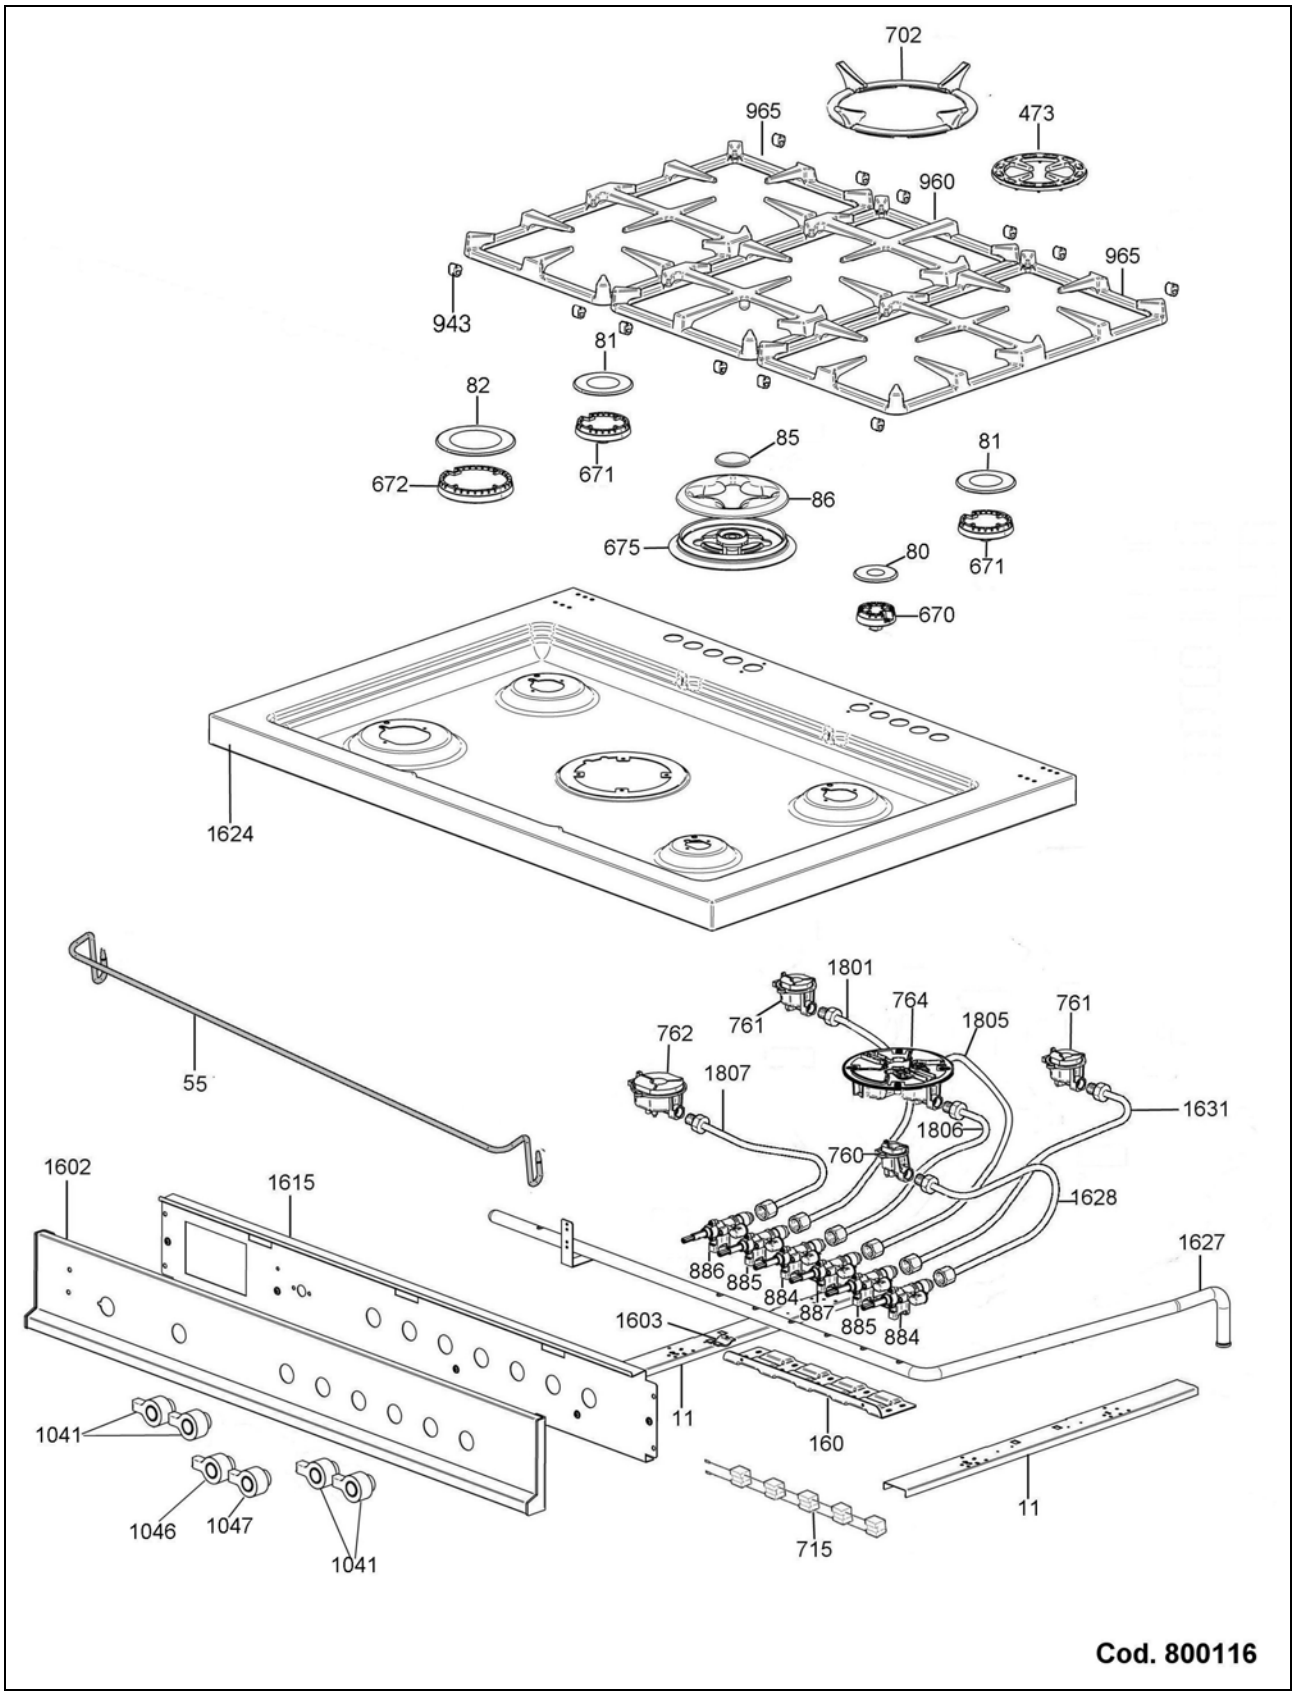
702
965
473
960
965
943
81
82
85
81
672
671
86
675
80
671
670
1624
55
1801
761
764
1805
761
762
1807
1631
1806
760
1628
1602
1615
1627
886
885
884
887
885
884
1603
11
160
1041
1046
1047
1041
715
11
Cod. 800116

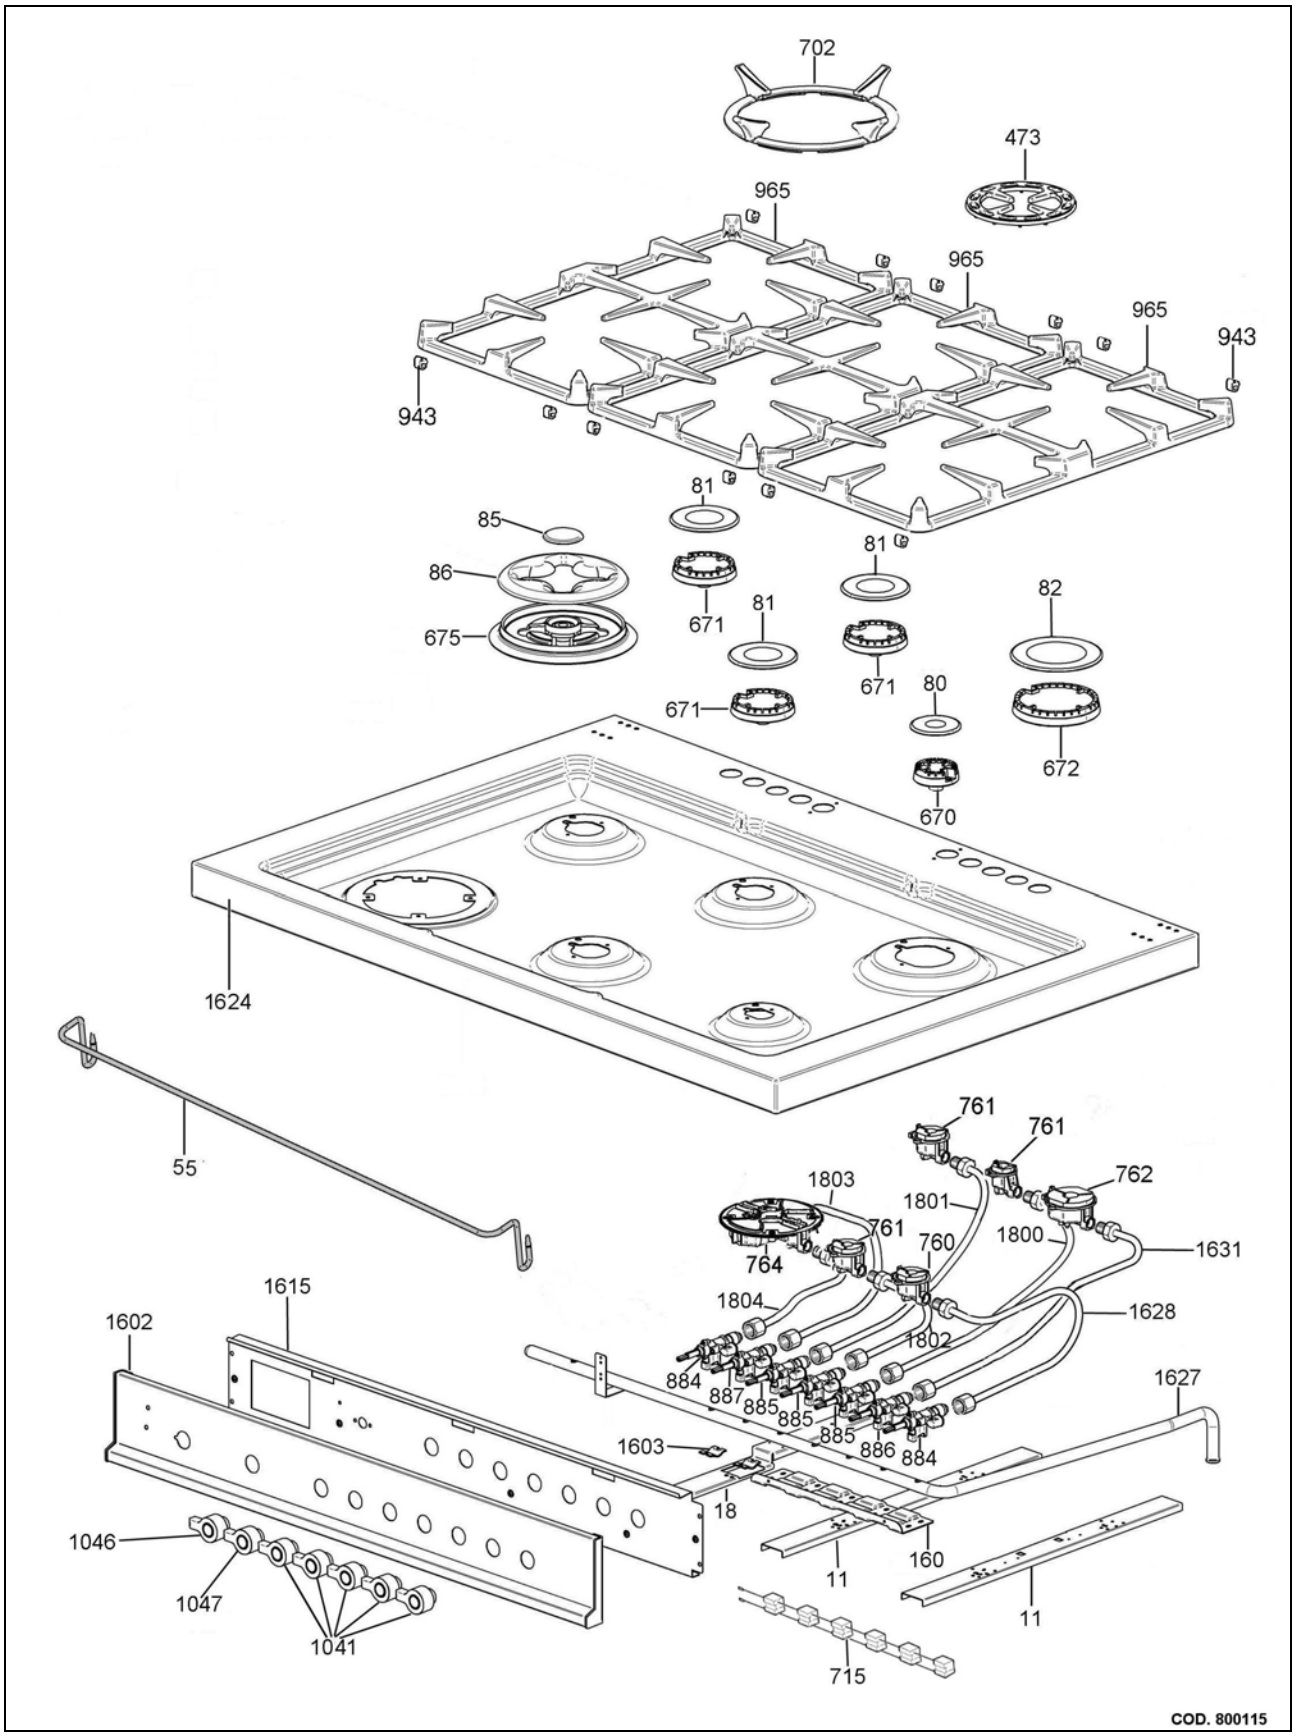
702
473
965
965
965
943
943
81
85
86
675
671
81
81
671
82
81
671
80
672
670
1624
55
761
761
762
1803
1801
761
760
1800
1631
764
1804
1628
1802
1615
1602
884
887
885
885
885
886
884
1627
1603
18
160
11
11
1046
1047
1041
715
COD. 800115

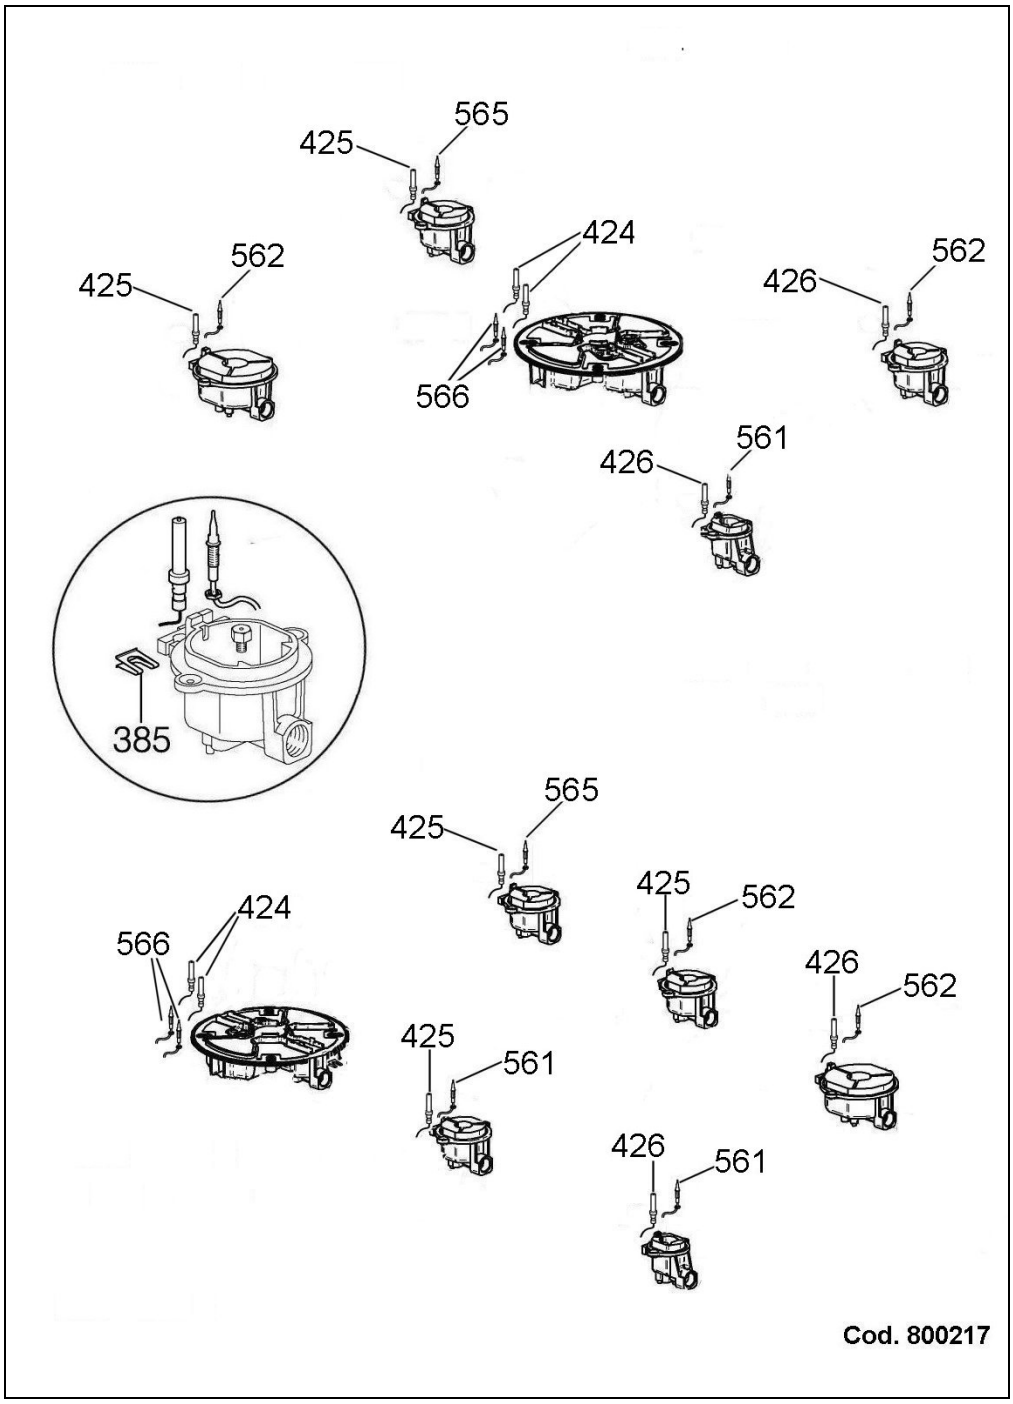
565
425
562
425
424
566
562
426
561
426
385
565
425
424
566
425
562
426
562
425
561
426
561
Cod. 800217

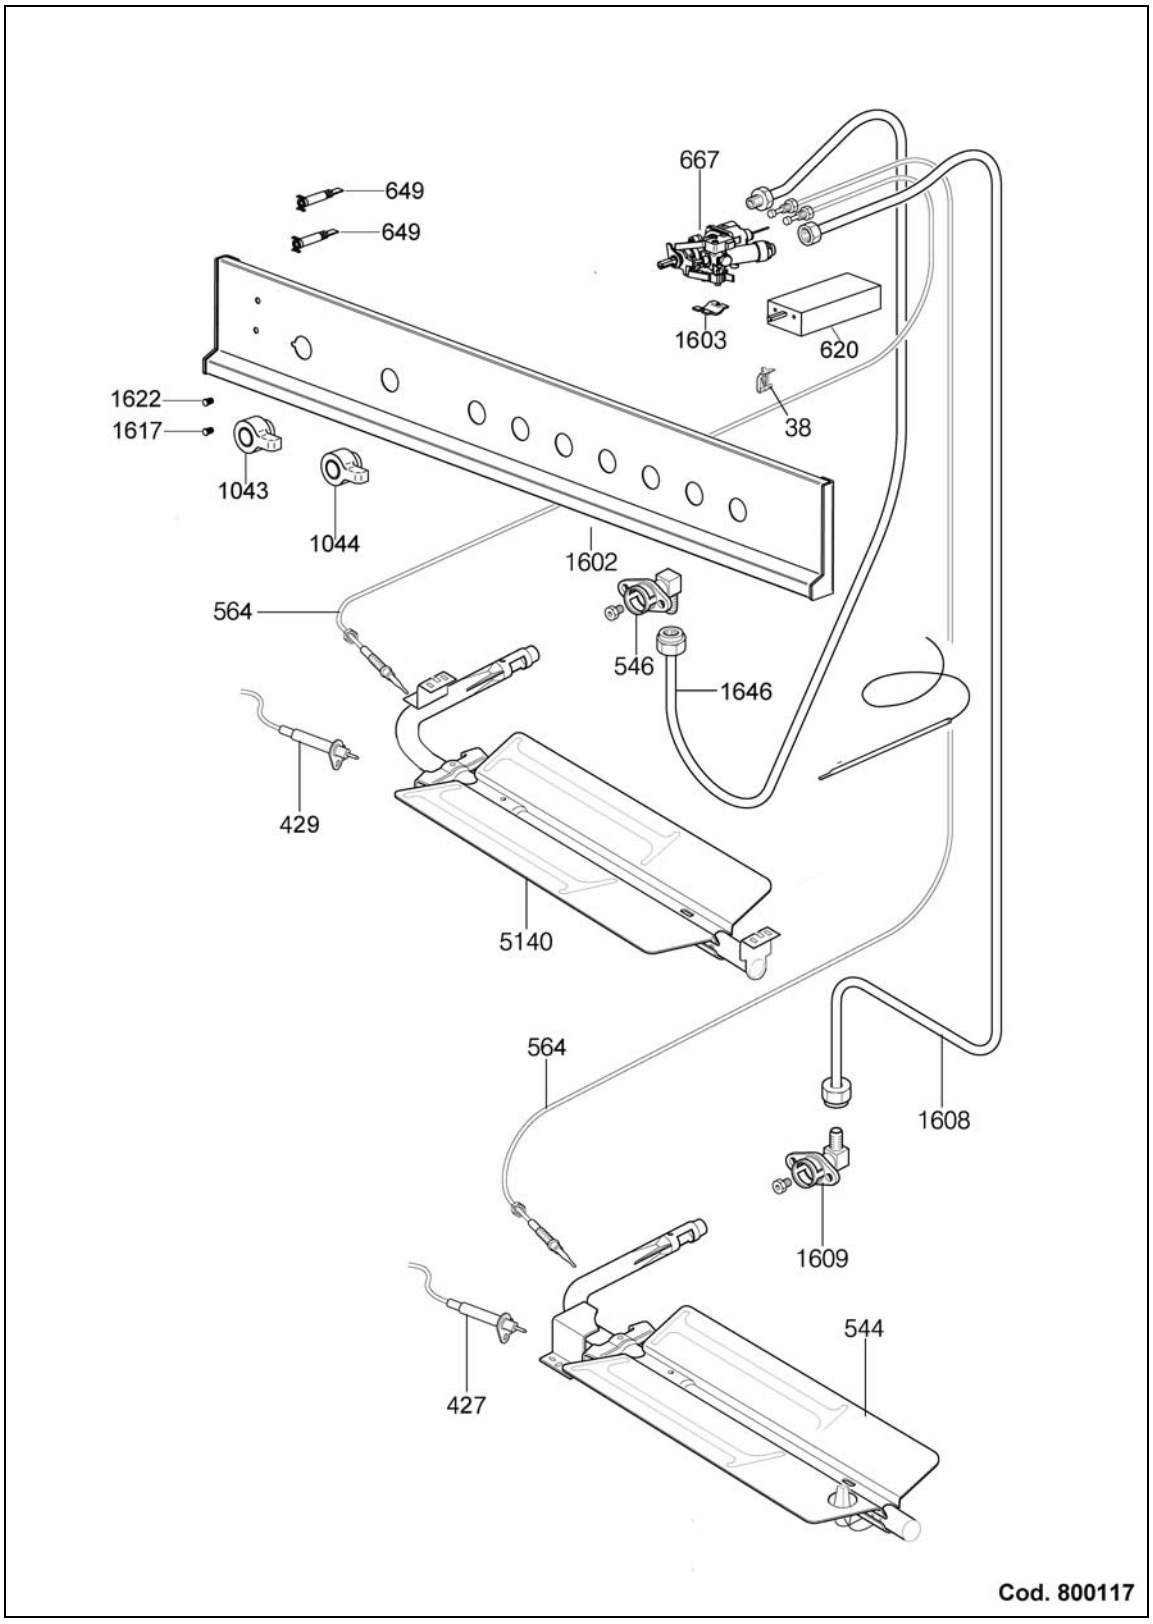
649
649
667
1603
620
38
1622
1617
1043
1044
1602
564
546
1646
429
5140
564
1608
1609
544
427
Cod. 800117

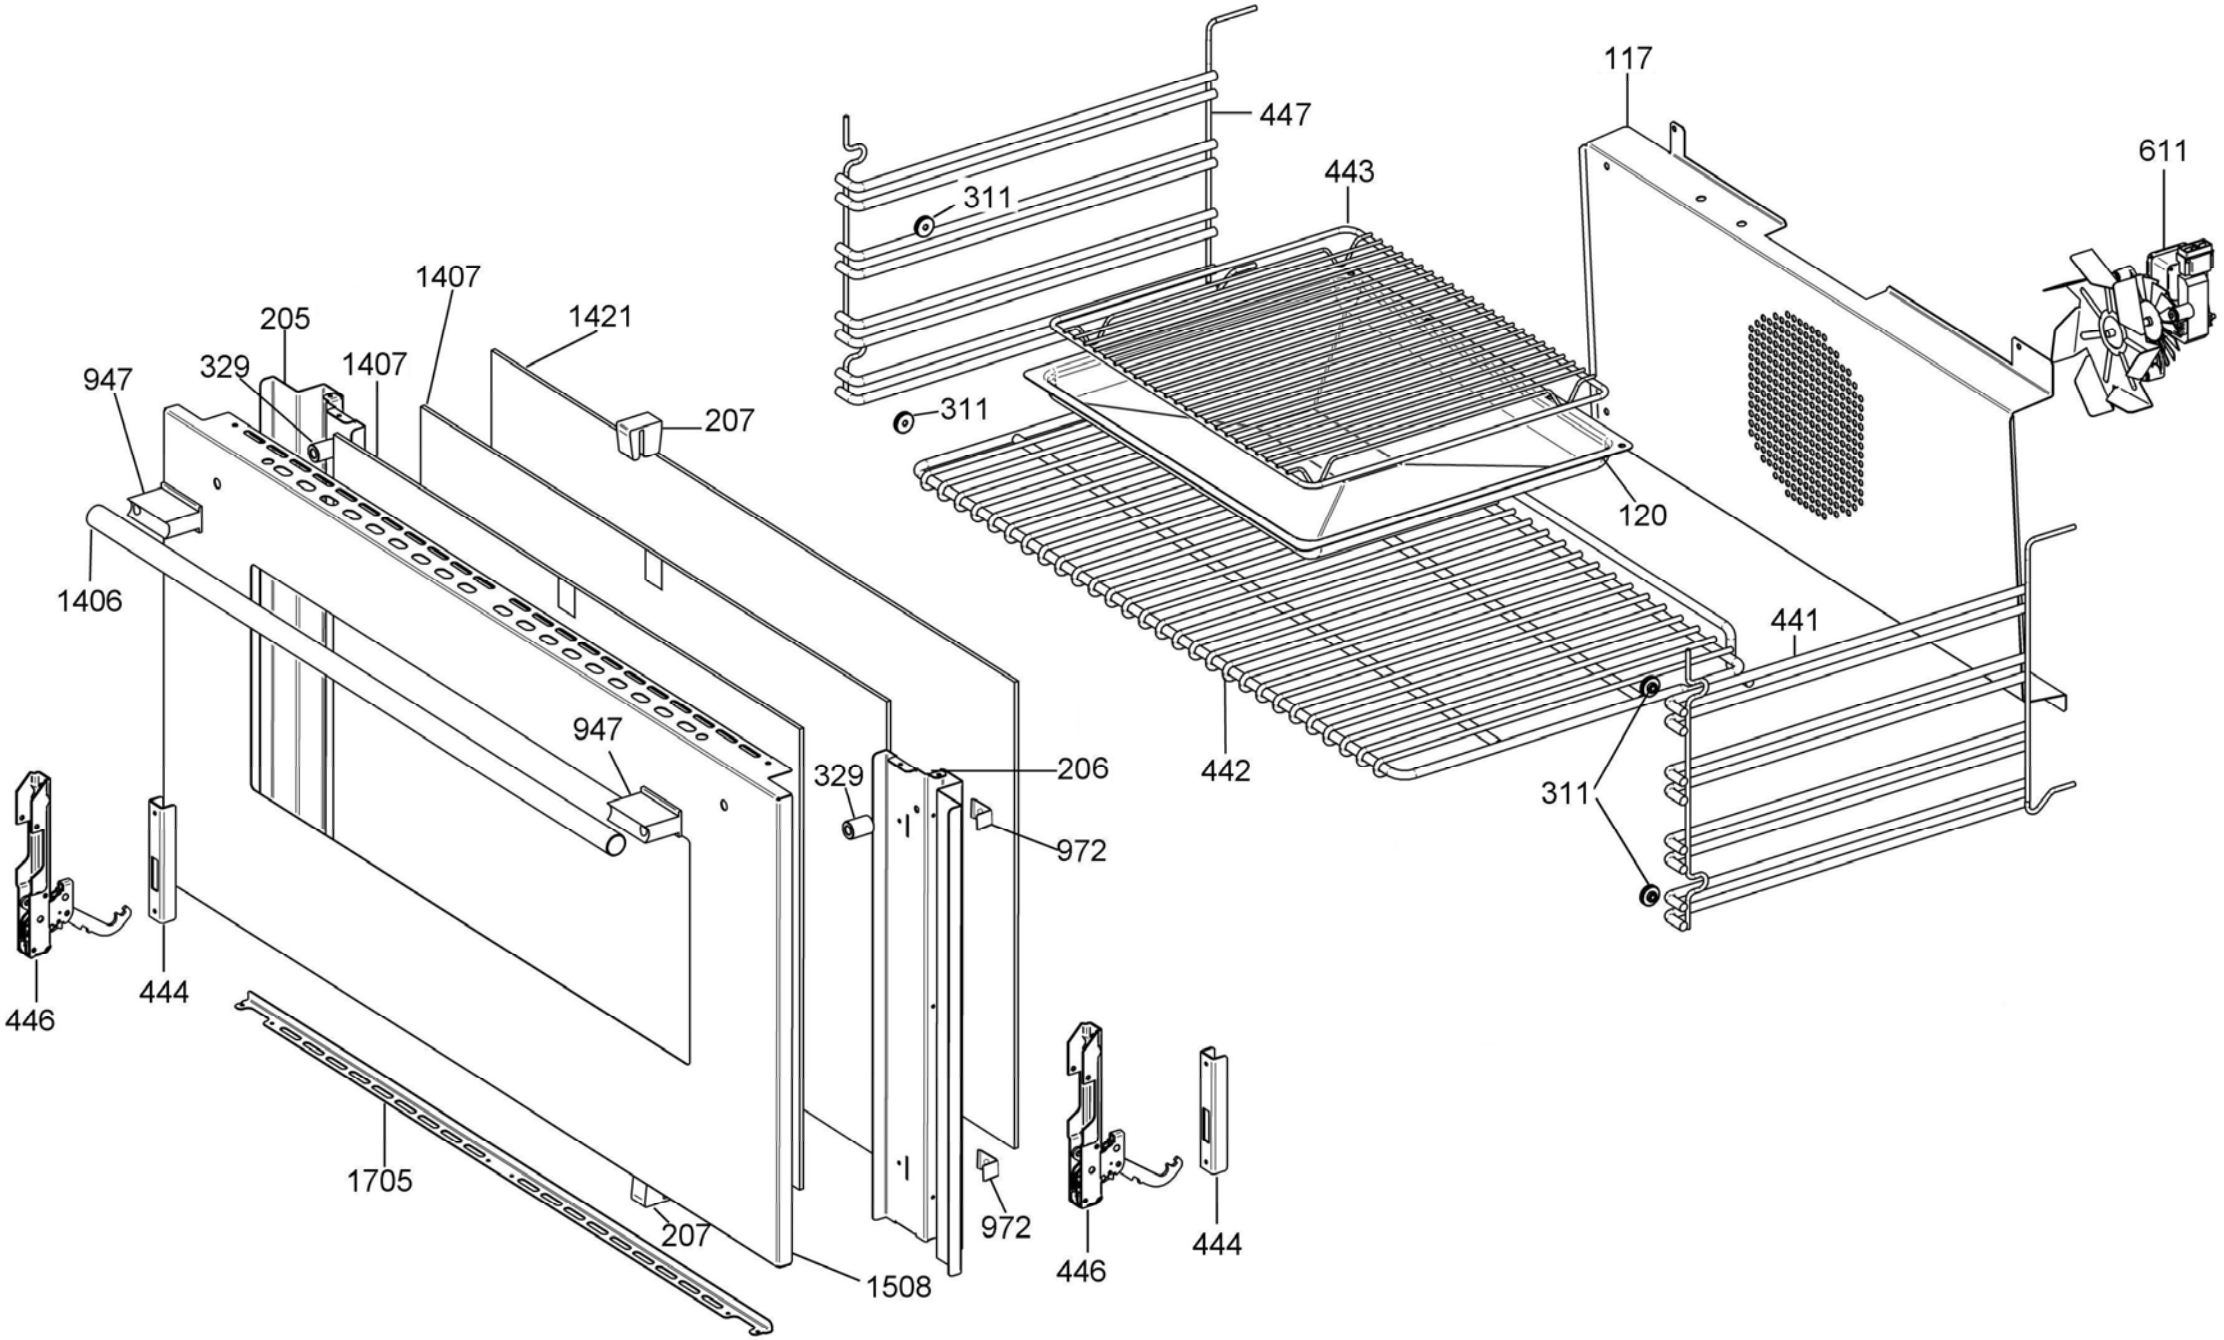
947
329
205
1407
1407
1421
207
1406
947
329
206
972
446
444
1705
207
1508
972
446
444
447
311
311
443
117
611
120
442
441
311

Cod. 800119

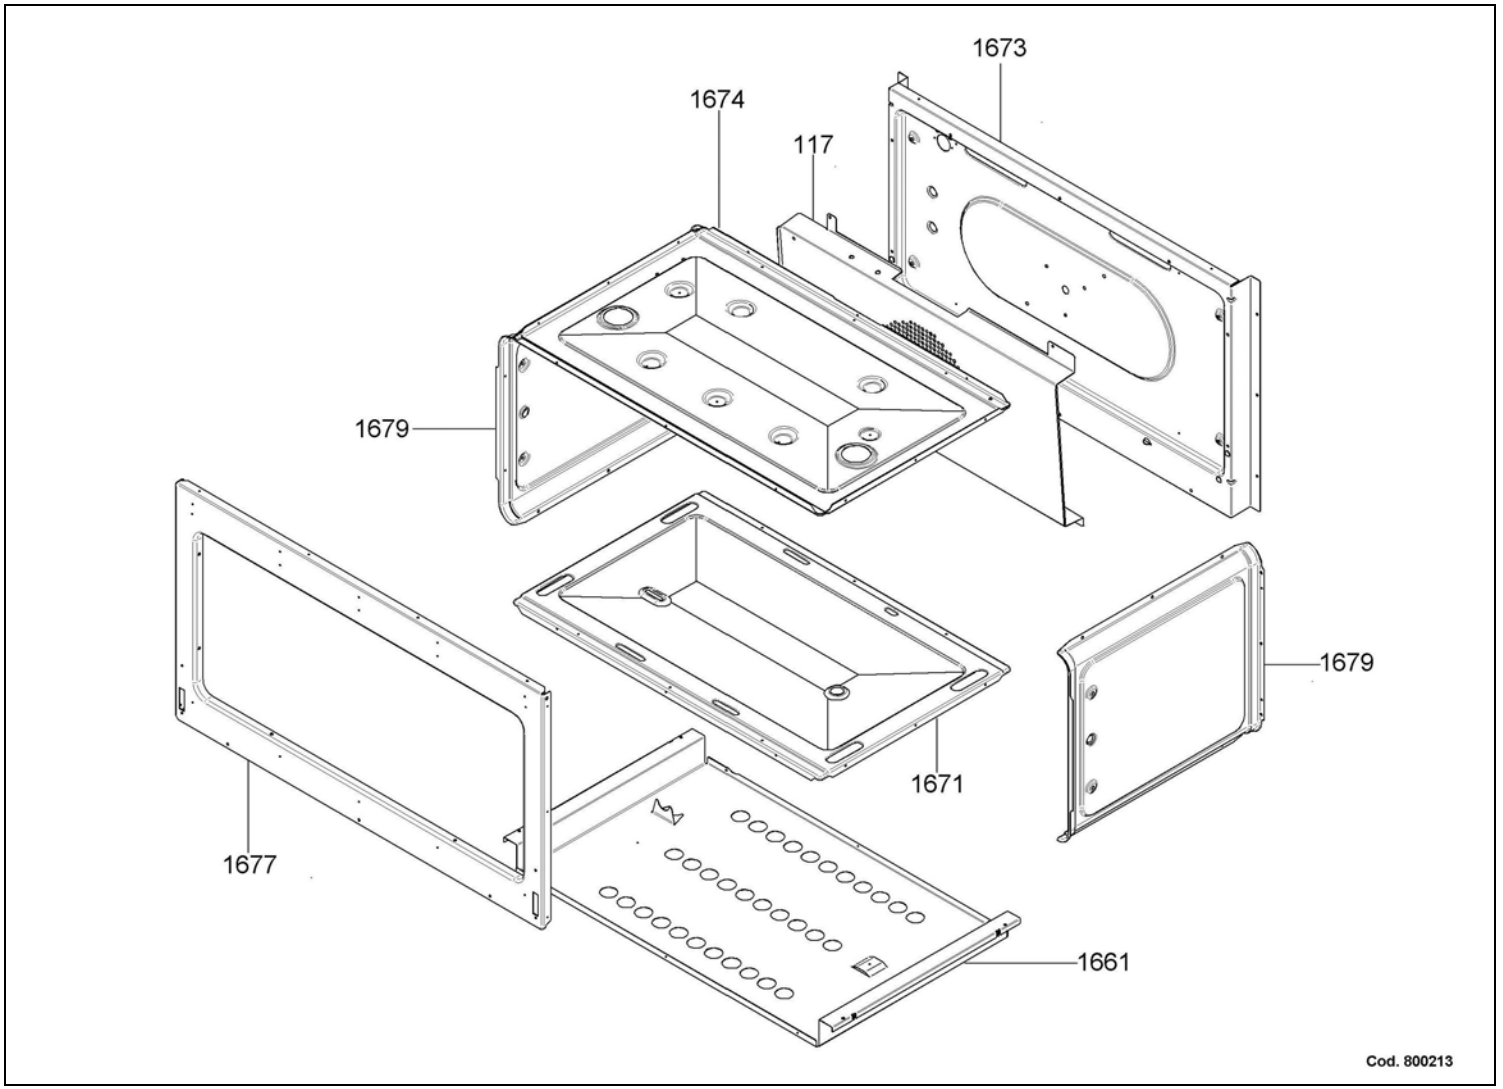
1673
1674
117
1679
1679
1671
1677
1661
Cod. 800213

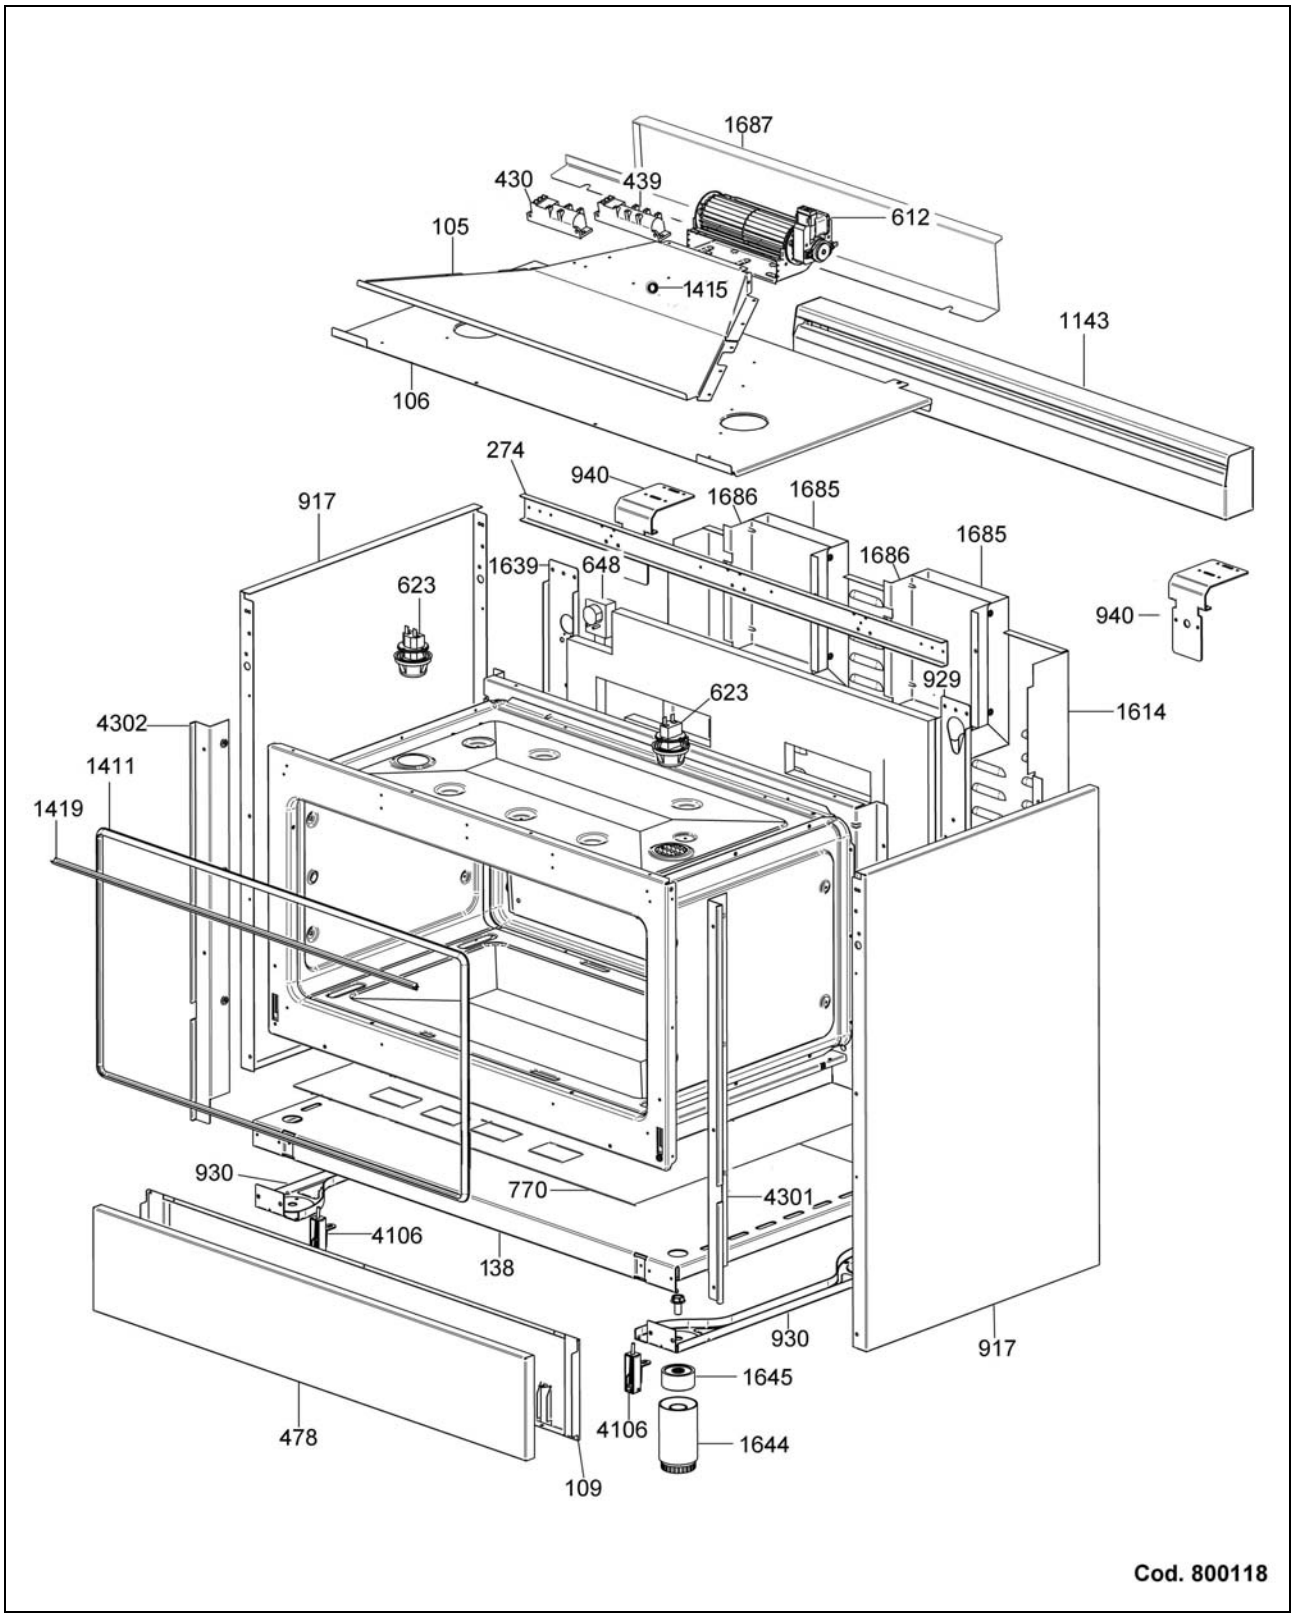
1687
430
439
612
105
1415
1143
106
274
940
1686
1685
917
1639
648
623
940
929
623
1614
4302
1411
1419
930
770
4301
4106
138
930
917
1645
4106
1644
478
109
Cod. 800118